


# Single Diverter Valve Plumbing & Electrical Directions

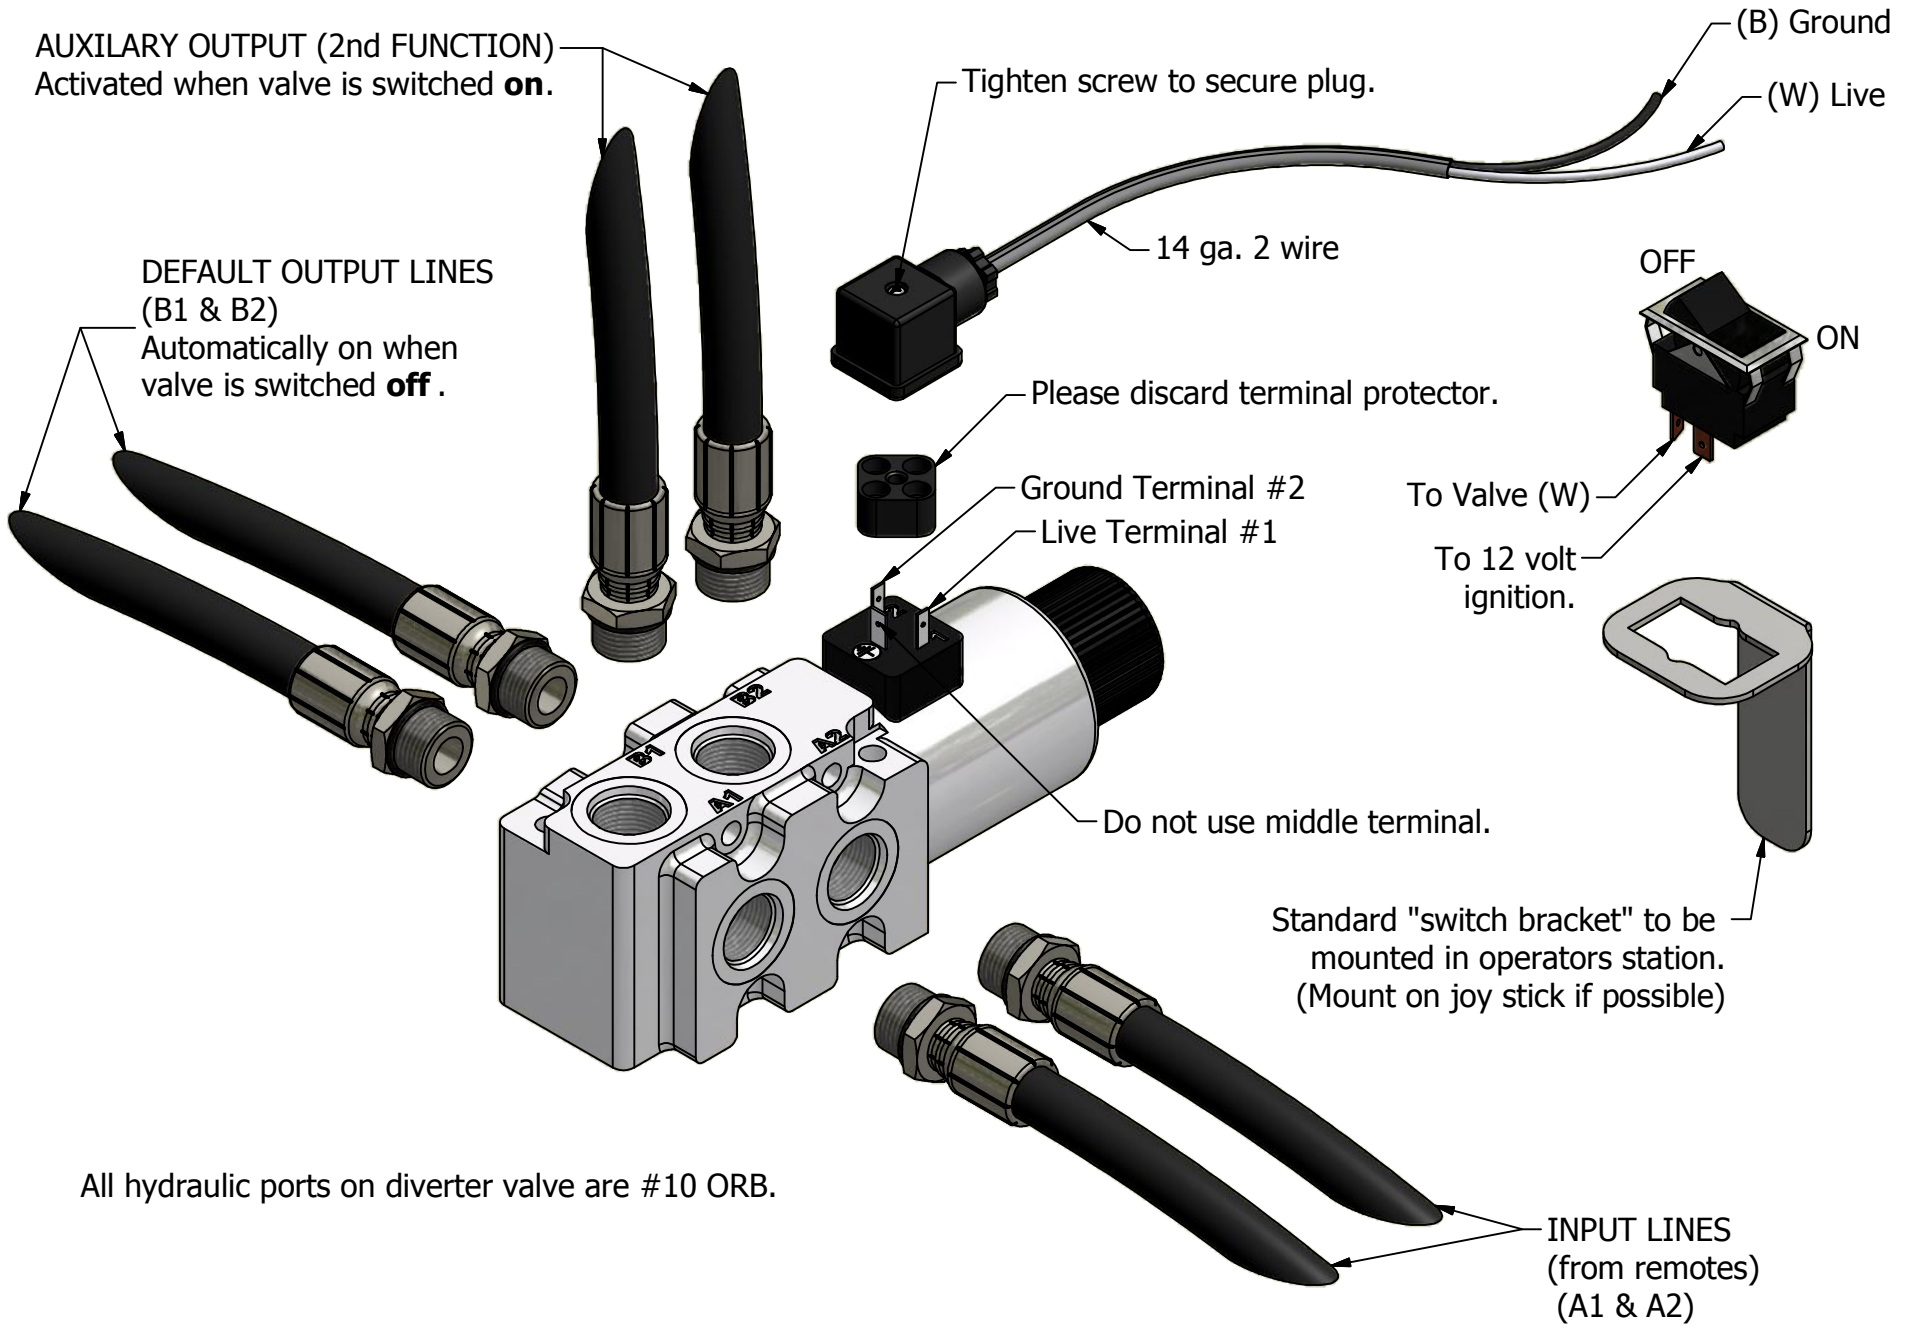

AUXILARY OUTPUT (2nd FUNCTION)  
Activated when valve is switched **on**.

DEFAULT OUTPUT LINES  
(B1 & B2)  
Automatically on when  
valve is switched **off**.

Tighten screw to secure plug.

(B) Ground

(W) Live

14 ga. 2 wire

Please discard terminal protector.

Ground Terminal #2

Live Terminal #1

OFF

ON

To Valve (W)

To 12 volt  
ignition.

Do not use middle terminal.

Standard "switch bracket" to be  
mounted in operators station.  
(Mount on joy stick if possible)

All hydraulic ports on diverter valve are #10 ORB.

INPUT LINES  
(from remotes)  
(A1 & A2)

# Diverter Valve Electrical Diagram

