



PARTS LIST FIGURE 24

1	3G038	Spindle	2 per cultivator
2	2E783	Inside Seal	1 per hub
3	2E781	Inside bearing	1 per hub
4	2E779	5-bolt hub	1 per spindle
5	2E782	Outside bearing	1 per hub
6	1A311	Spindle washer, 5/8"	1 per hub
7	1A493	Slotted hex nut, 5/8"	1 per hub
8	1B016	Cotter key, 3/16"	1 per hub
9	2E780	Dust cap	1 per hub

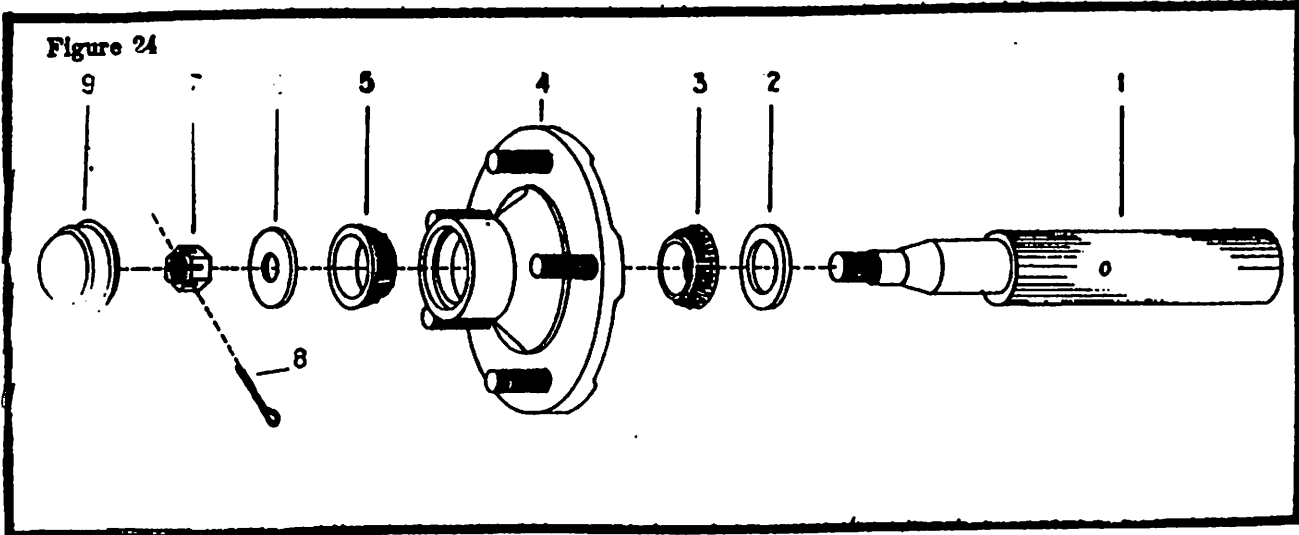

PARTS LIST FIGURE 25

1	5N477	Wing gauge wheel mount	1 per wing gauge wheel jack
2	5N476	Wing gauge wheel axle beam	1 per wing gauge wheel jack
3	5N479	1" x 21-7/8" jack screw	1 per wing gauge wheel jack
	5N478	Handle	1 per wing gauge wheel jack
6	1A299	5/8" roll pin	1 per wing gauge wheel jack
7	1B016	5/8" flat washer	2 per wing gauge wheel jack
		3/16" cotter pin, 1/4"	1 per wing gauge wheel jack

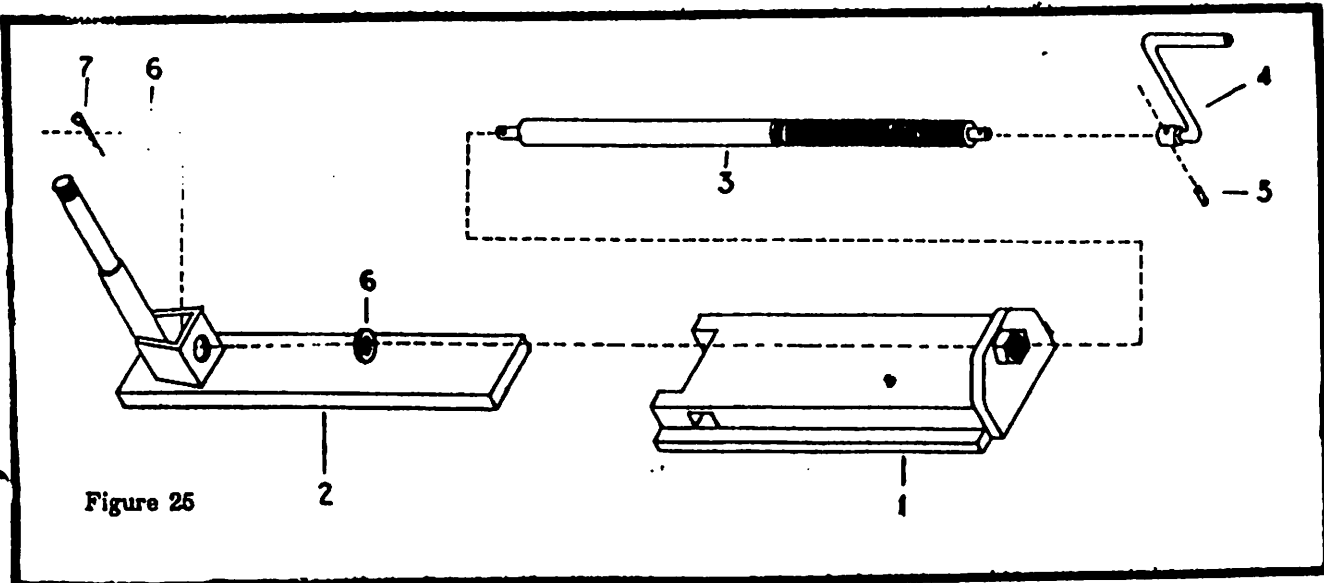

PARTS LIST FIGURE 26 (4-bolt hub)

Item	Part No.	Description	Quantity
1	2E775	Inside Seal	1 per hub
2	2E778	Inside bearing	1 per hub
3	2E777	4-bolt hub	1 per spindle
4	2E778	Outside bearing	1 per hub
5	1A299	Spindle washer, 1"	1 per hub
6	1A505	Slotted hex nut, 1"	1 per hub
7	1B015	1/8" cotter key	1 per hub
8	2E776	Dust cap	1 per hub

