


## HANDGUN INSTALLATION ON GENERAL SPRAYERS

A quick and easy method for installation of a handgun on General Sprayers is to (1) remove hose from pressure relief (bypass) valve, (2) remove pressure relief valve from the main control valve. (3) Install a close nipple using an appropriate thread sealer, and "T" fitting into the main valve. (4) On one outlet of the "T" fitting install the pressure relief valve and reinstall the hose. (5) On the other outlet of the "T" fitting connect the shut off valve and the handgun hose fitting. Then connect the handgun hose. (6) Pressure check all fittings for leaks using plain water before using the sprayer with chemicals.

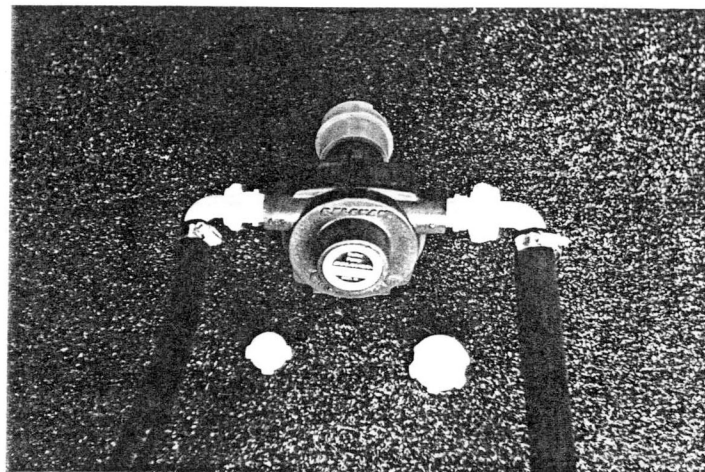

## PUMP SAVER FEATURE

General Sprayers with 6 and 8 roller pumps are equipped with pump saver fittings to connect the suction and pressure hoses to the pump. This exclusive feature allows easy removal, clean-up and storage of your pump. Pump life will be extended if your pump is rinsed out after every use and filled with automotive antifreeze and capped for storage between uses. Antifreeze must be properly disposed of and the pump rinsed out before using.