


# Tube-Line Individual Bale Wrapper **TL1000R**

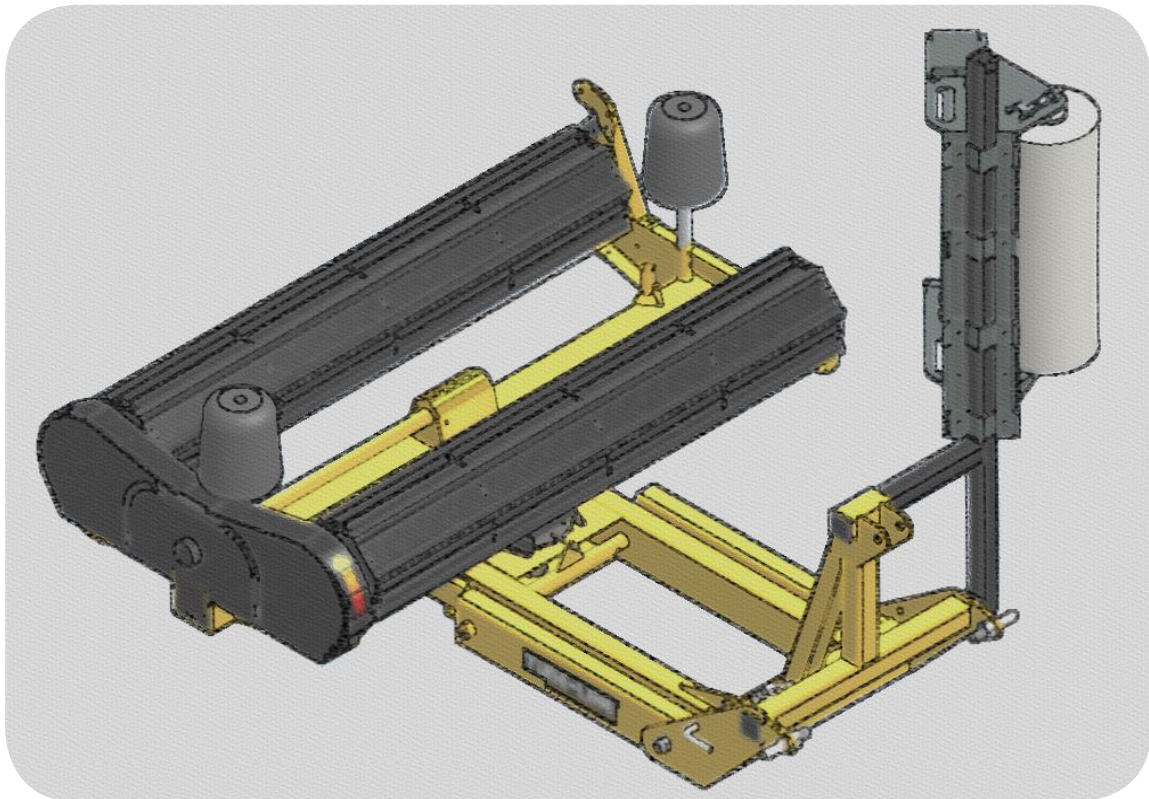

# Operator's Manual

Thank you for choosing the Tubeline TL1000R Individual Bale Wrapper. Our hope is that it will give you many years of productive service. This machine is designed to wrap round bales in a film of plastic.

Please read and understand this manual and the machine before operation.

## Warranty and Limitation of Liability

All equipment is sold subject to mutual agreement that it is warranted by the company to be free from defects of materials and workmanship. But the company shall not be liable for special, indirect or consequential, damages of any kind under this contract or otherwise. The company's liability shall be limited exclusively to replacing or repairing without charge, at its factory or elsewhere, at its discretion.

Any material, or workmanship defects which become apparent within one year from the date on which the equipment was purchased, and the company shall have no liability for damages of any kind. The buyer by the acceptance of the equipment will assume all liability for any damages, which may result from the use or misuse by his employees or others.

Warranty coverage is null and void unless Warranty  
Registration form has been completely filled in and is on file at  
Tube-Line Manufacturing Ltd.

## Serial # Decal

The implement serial number is located on the front of the frame.  
This number helps us to track changes and improvements and must be mentioned  
when ordering parts or requesting service. For your convenience, a space has been  
provided inside the front cover of this manual to record the serial number,  
model number, purchase date, and dealer name.

Model # : \_\_\_\_\_

Serial # : \_\_\_\_\_

Date Purchased : \_\_\_\_\_

Dealer Name : \_\_\_\_\_

# Table of Contents

<b>Operator's Manual</b>	<b>II</b>
Warranty and Limitation of Liability	II
Serial # Decal	II
<b>Section 1: Safety</b>	<b>1-1</b>
Safety Guidelines	1-2
Storage & Maintenance	1-2
Safety Decal Location	1-3
Safety Decals	1-5
Before Operation	1-8
Bale Size	1-8
Round Bales	1-8
Square Bales	1-8
<b>Section 2: Initial Setup</b>	<b>2-1</b>
Electrical Connection	2-3
<b>Section 3: Operating Procedure</b>	<b>3-1</b>
To Install Plastic Wrap Film	3-1
Trouble Shooting Plastic Installation	3-1
To Wrap Bales	3-2
First Bale	3-2
Continuous Wrapping & Unloading	3-2
<b>Section 4: Bale Wrap Computer Operation</b>	<b>4-1</b>
<b>Section 5: Parts Lists &amp; Breakdowns</b>	<b>5-1</b>
Turntable	5-2
Rollers	5-4
Middle Rollers	5-6
Frame	5-8
Frame (Current)	5-10
Film Tensioner	5-12
Offset Film Tensioner	5-14
Hydraulic Schematic	5-16
Electrical Diagram	5-18
<b>Torque Values - Imperial</b>	<b>V</b>
<b>Torque Values - Metric</b>	<b>VI</b>

# Section 1: Safety

**Take note!** This safety alert symbol is found throughout this manual to call your attention to instructions involving yourself and others working around the machine.

Failure to follow these instructions can result in injury or death!



This symbol means

**- Attention!  
Become Alert!  
Your Safety is involved!**

## **Signal Words are used in this book.**

**Caution:** Indicates a potentially hazardous situation that may result in injury.

**Warning:** Indicates a potentially hazardous situation that could result in serious injury or death.

**Danger:** Indicates a hazardous situation that needs to be avoided. It is you the operator that needs to be aware of these dangers.

If you have any questions not answered in this manual, please contact your dealer or Tubeline Manufacturing Ltd.

6455 Reid Woods Drive,  
R. R. #4 Elmira  
Ontario, Canada  
N3B 2Z3

Email : [sales@tubeline.ca](mailto:sales@tubeline.ca)

Fax : (519)-669-5808

Tel : (519)-669-9488

## **Safety Guidelines**

Safety of the operator is one of our main concerns, however we do hear of some accidents that could have been avoided if some precautions had been taken. To avoid personal injury study the following precautions and insist those working with you or for you, follow them.

In most cases the pictures will have the shielding in place, in some they may be removed, only to show a view behind the shield. Keep all the shields, safety doors in place. If they become faulty and fail to work replace them. They are for your safety, do not operate the equipment with them removed.

Replace any decals that may be missing or that are not readable. Location of the decals is indicated in this manual.

Do not operate this machine while under the influence of drugs or alcohol.

Review the safety instructions with all users annually.


This equipment should not be operated by children, or with those unfamiliar with the operation of the machine. Do not allow persons to operate this machine until they have read this manual and/or were instructed by a qualified person.

Do not paint over, remove or deface any safety signs or warning decals on your equipment. Observe all safety signs and practice the instructions on them.

## **Storage & Maintenance**

With regular upkeep and careful storage this machine should serve you well for many years. Store the machine in a cool dry place. It is recommended that you tighten the drive chains after the first day of use every year. Also grease the drive chains before storing the TL1000R, replace any removed shields.

# Safety Decal Location

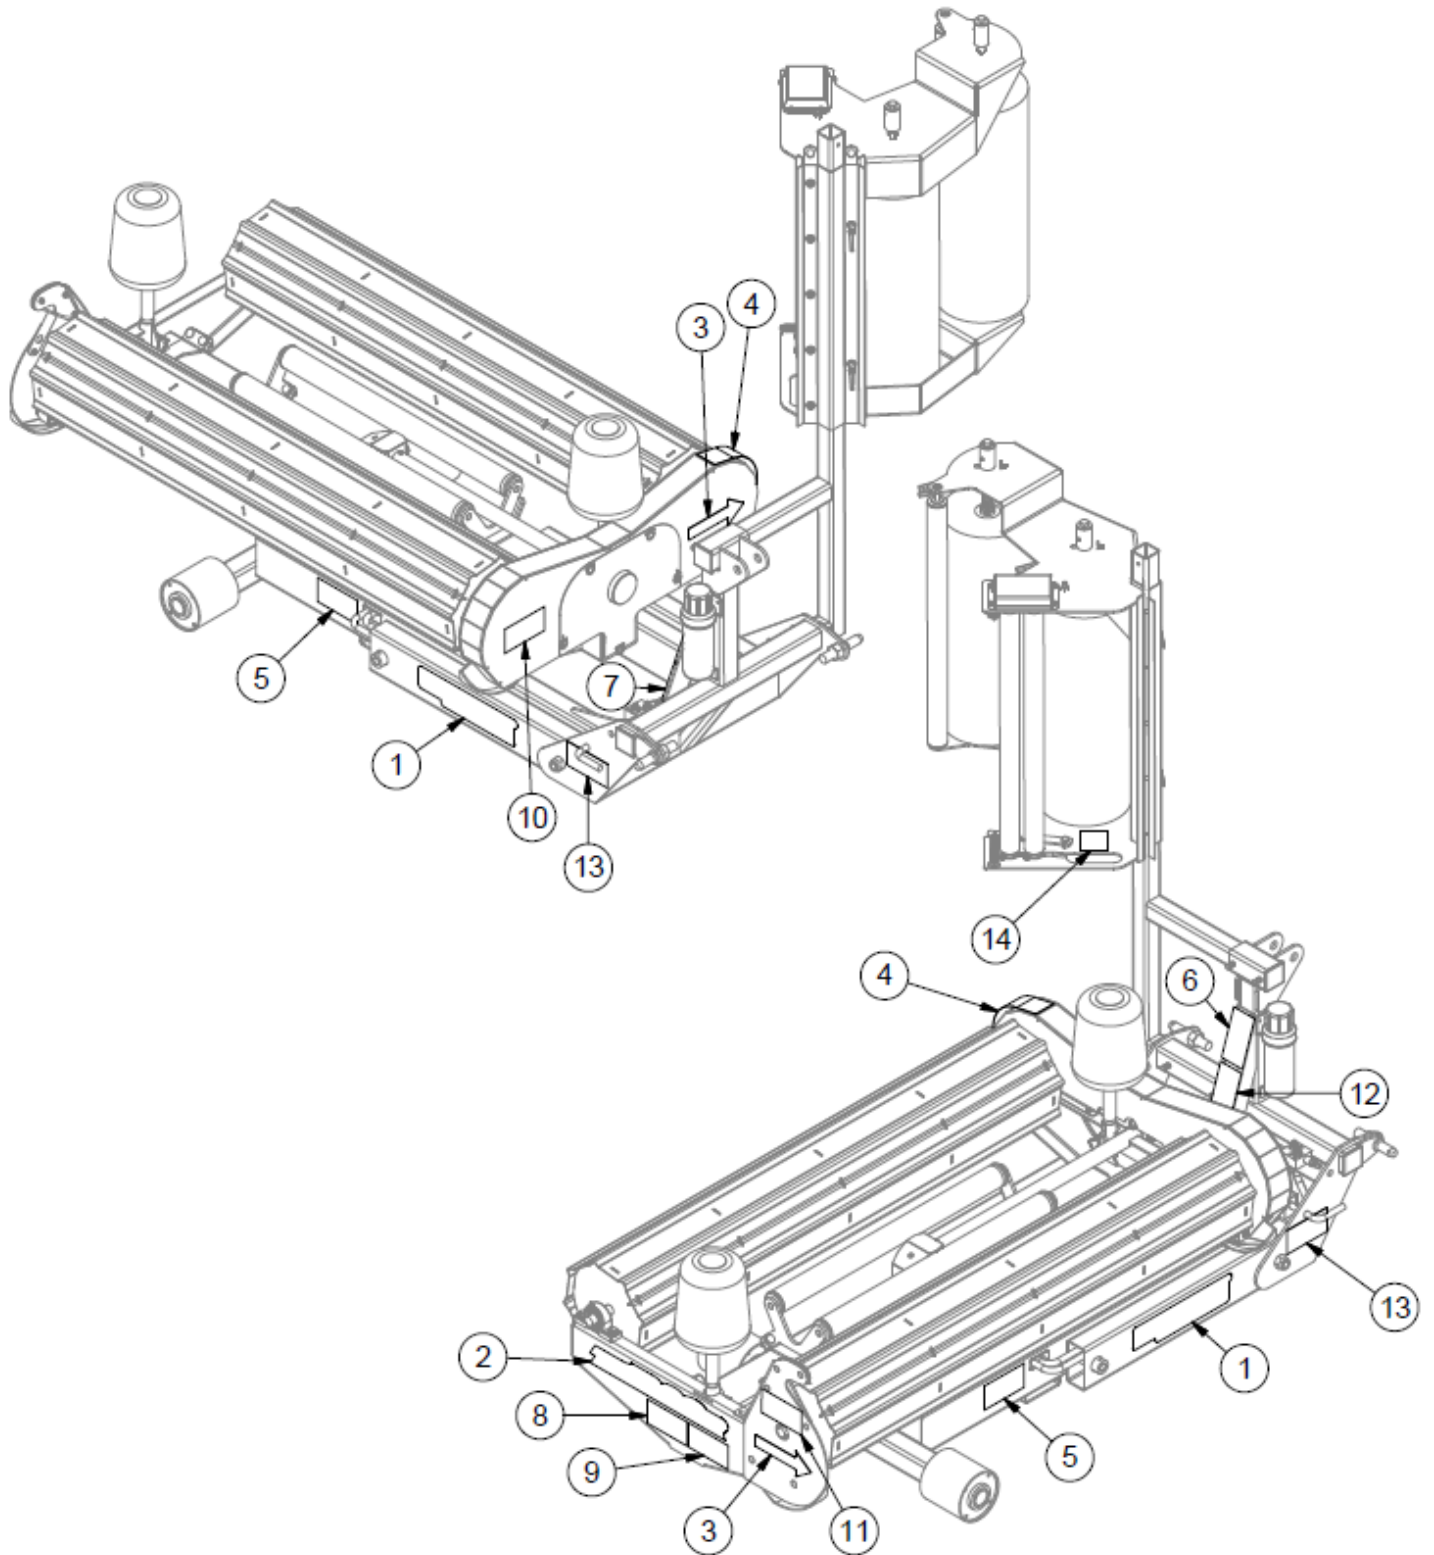

## Safety Decal Location

ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	DE28146	Tubeline Decal 4" x 16"
2	1	DE36073	Decal Model Number for TL1000R
3	2	DE36075	Stand Clear RH
4	1	DE36080	Decal for TL1000R-Unload
5	1	DE41713H	ISO Decal - High Pressure Fluid Horizontal
6	1	DE41714	ISO Decal - Read Operator's Manual
7	1	DE41715	ISO Decal - Remove Key Before Repair
8	1	DE41716H	ISO Decal - Shaft Entanglement Horizontal
9	1	DE41899	ISO Decal - Stand Clear of Indi Wrapper
10	1	DE41902	ISO Decal - Chain Entanglement
11	1	DE41913H	ISO Decal - Stop Moving Parts Before Handling
13	1	DE42784	ISO Decal - Read OM Decals Section
14	1	DE42858	ISO Decal - TL1000R Transport Lock
15	1	DE43227	TL1000R Tensioner Wrap Decal

## Safety Decals

Item 1 on [pg. 1-3](#)

Part No: DE28146 - Both Sides of Frame



Item 3 on [pg. 1-3](#)

Part No: DE36075 - Corners of Turntable


Shows direction of turntable direction.



Item 14 on [pg. 1-3](#)

Part No: DE43227 - Inside Bottom Face of Tensioner

Follow this diagram when loading plastic rolls onto the tensioner.

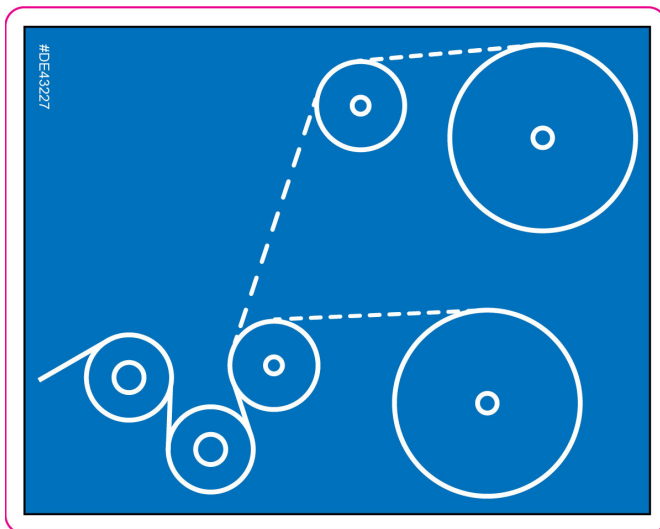

Item 5 on [pg. 1-3](#)

Part No: DE36073 - Rear Face of Turntable



Item 4 on [pg. 1-3](#)

Part No: DE36080 - Dump Side of Turntable

This decal must be turned towards bale dump side before tilting frame.






## Safety Decals

Item 5 on [pg. 1-3](#)

Part No: DE41713H - Rear Right of Folding Frame


Do not use hand to check for hydraulic leaks, refer to operators manual for maintenance instructions.

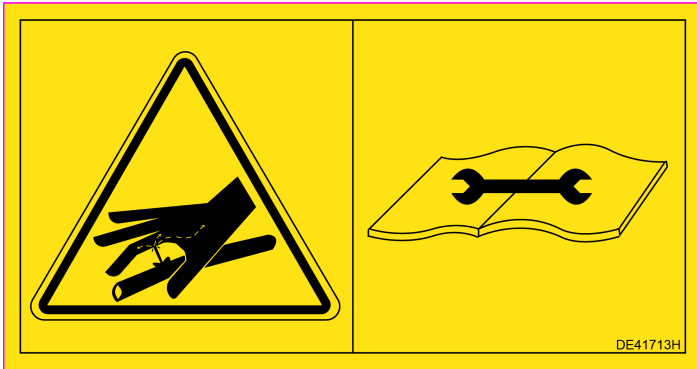

Item 6 on [pg. 1-3](#)


Part No: DE41714 - Inside Face of 3 Point Hitch Upright Tube

Read and understand manual before operating machine.

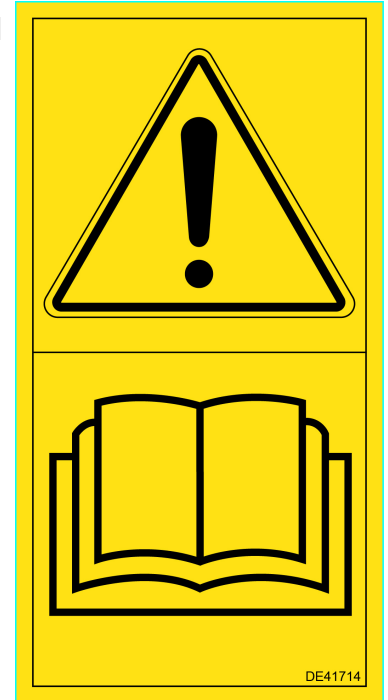

Item 7 on [pg. 1-3](#)


Part No: DE41715 - Inside Face of 3 Point Hitch Upright Tube

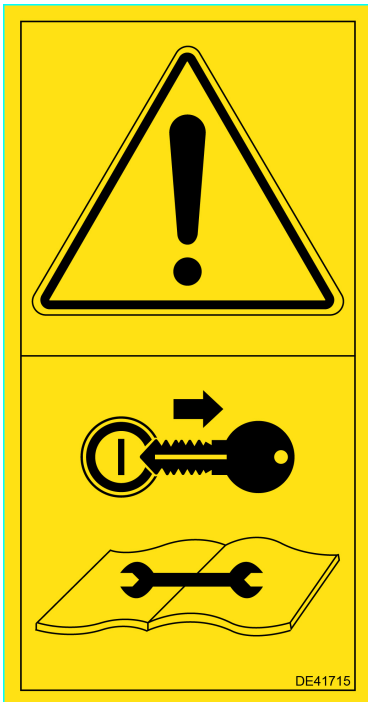

Remove key from power unit before attempting any maintenance on this machine.

Item 8 on [pg. 1-3](#)


Part No: DE41716H - Rear Face of Turntable  
Keep hands away from shaft ends while machine is operating.

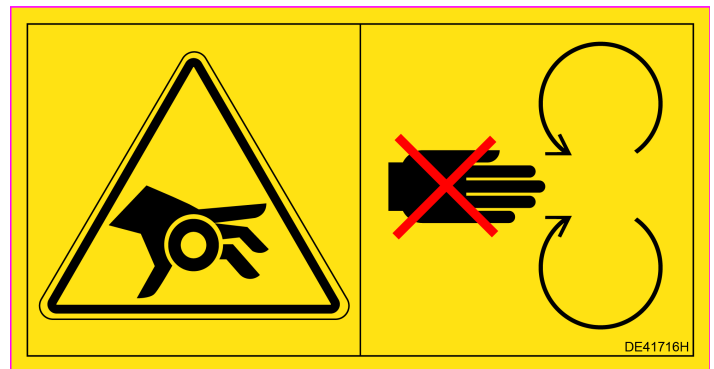

## Safety Decals

Item 9 on [pg. 1-3](#)


Part No: DE41899 - Rear Face of Turntable  
Stand clear of wrapper while turntable is spinning.

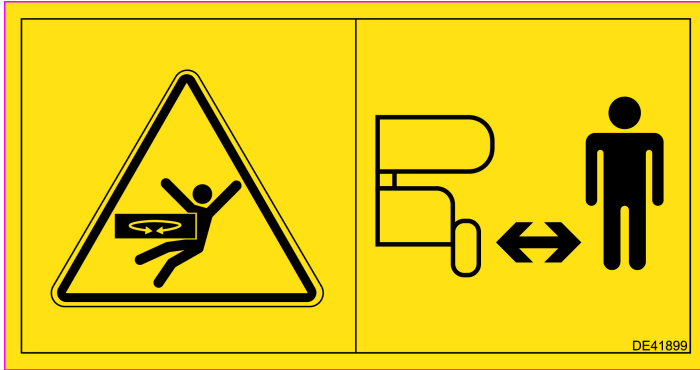

Item 11 on [pg. 1-3](#)

Part No: DE41913H - Rear Right Face of Turntable


Wait until all machine components have stopped moving before touching.

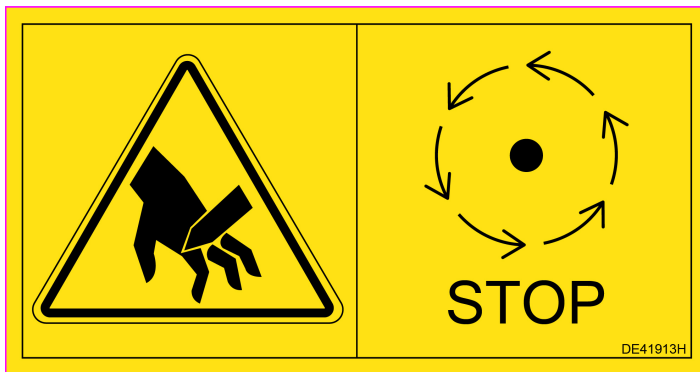

Item 13 on [pg. 1-3](#)


Part No: DE42858 - Front Right Side of 3 Point Hitch Frame

Lock dump frame before transporting. Unlock before wrapping.

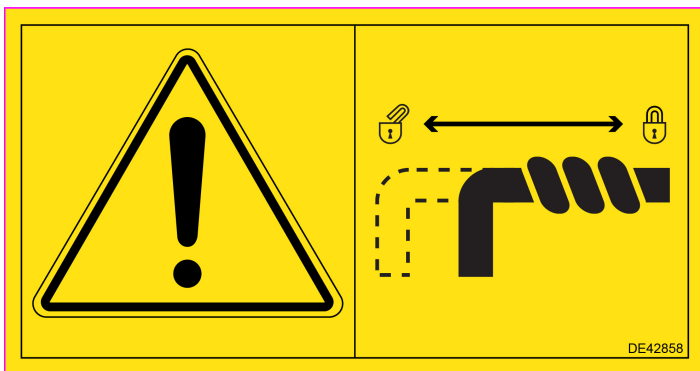

Item 10 on [pg. 1-3](#)


Part No: DE41902 - Front Face of Turntable  
Do not remove shields before drive components have completely stopped. Keep hands away while machine is in operation.

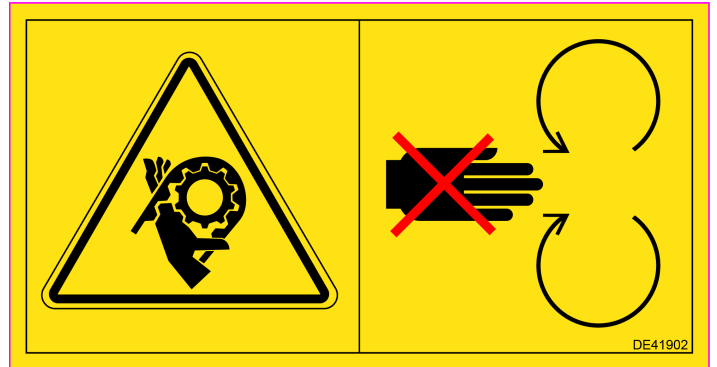

Item 12 on [pg. 1-3](#)

Part No: DE42784 - Inside Face of 3 Point Hitch Upright Tube

Read and understand decal section of manual before operating this machine.

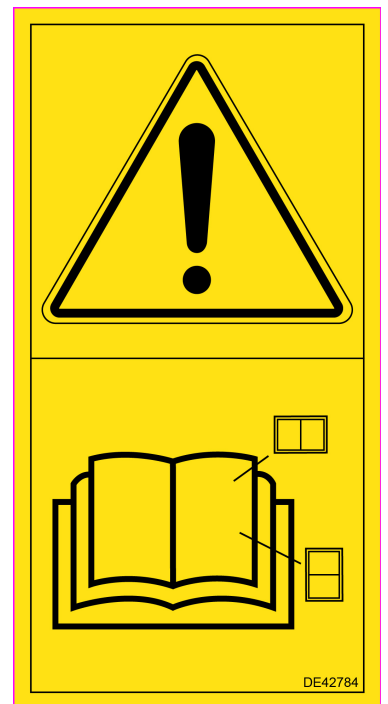



## Remember

Your best assurance against accidents or damage to the machine is to know how it operates. If you do not understand a portion of the manual or a function of the wrapper, please contact your dealer or an experienced operator.



## Before Operation

- Carefully study and understand the manual or be trained by an experienced operator.
- Do not wear loose clothing that may get caught in moving parts.
- Visually inspect the machine to make sure no parts are loose or missing.
- Be sure that no tools are left on the machine.
- Do not hurry the learning process. Be familiar with one part before trying the next part.
- Practice by running the machine through its paces without a bale on the machine until you are comfortable and familiar with the operation.

### Bale Size


#### Round Bales

The TL1000R will wrap bales from a 4' diameter to 5' x 5 ½'.


#### Square Bales

Model TL1000R is **NOT** a square bale machine.


## Section 2: Initial Setup

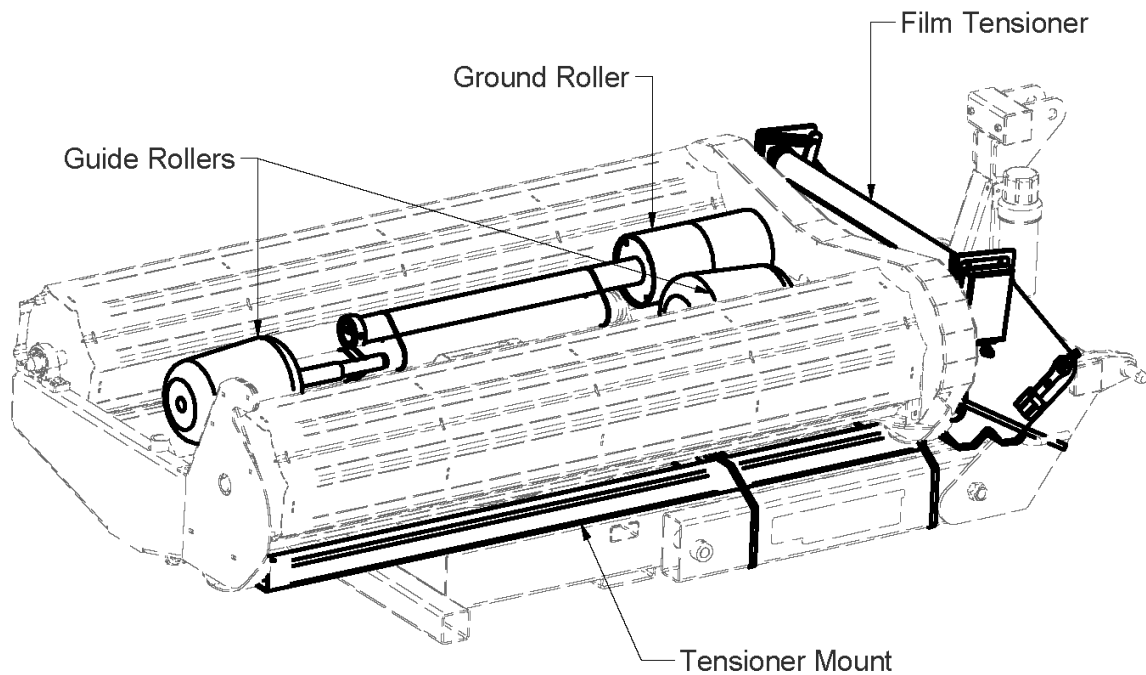


- Remove all parts banded and wired to main frame and set aside.
- Remove monitor, wiring harness and manuals from shipping location behind end shield (35090).

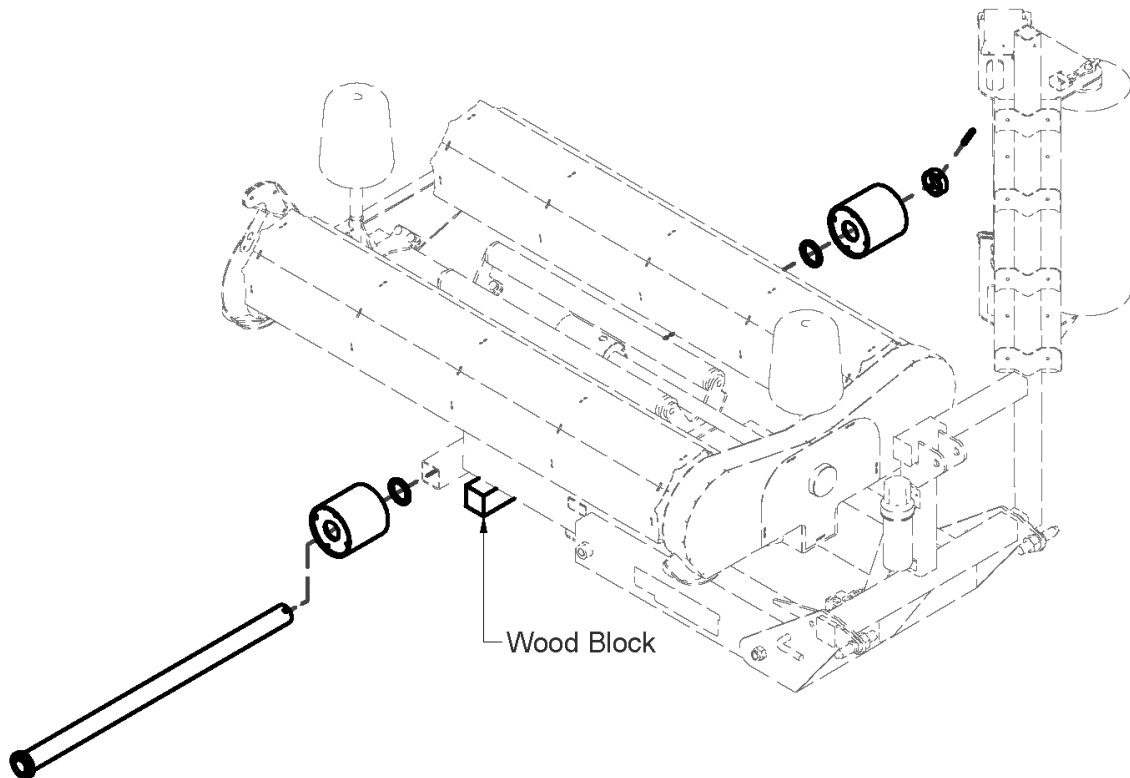

- Lift rear of frame and support with a suitable block of wood. (To allow roller wheel installation)
- Remove one roller wheel from shaft and slide into rear frame tube.
- Slide second roller onto shaft and secure with collar and provided bolt (or pin).

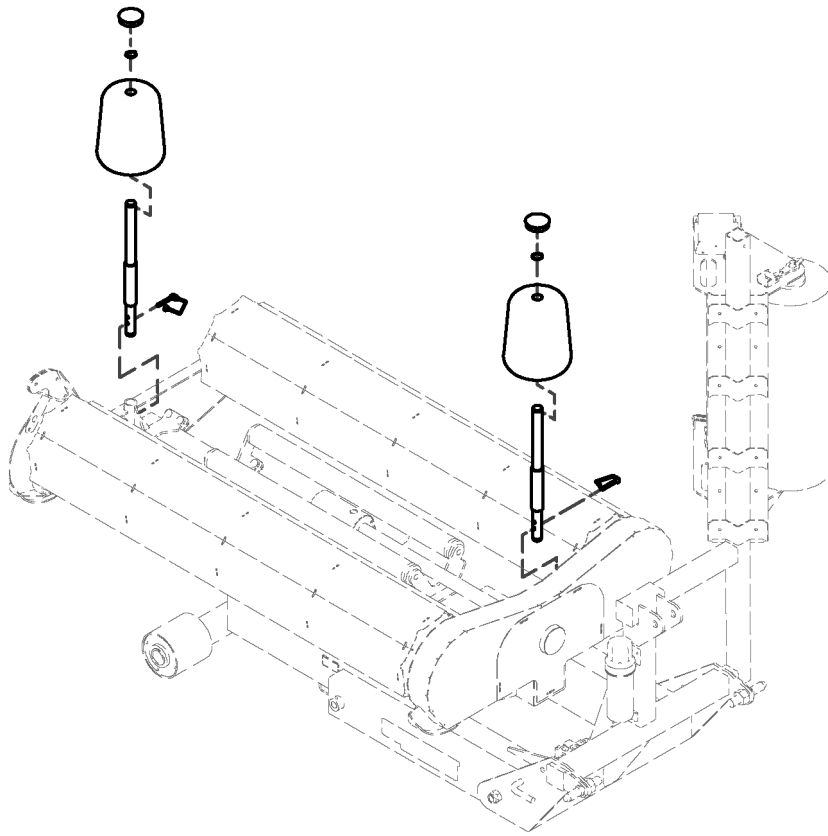


- Install both guide rollers into holders and fasten with lock pin. Guide rollers should be centered on the frame tube and positioned so that the bale width will fit nicely between rollers.

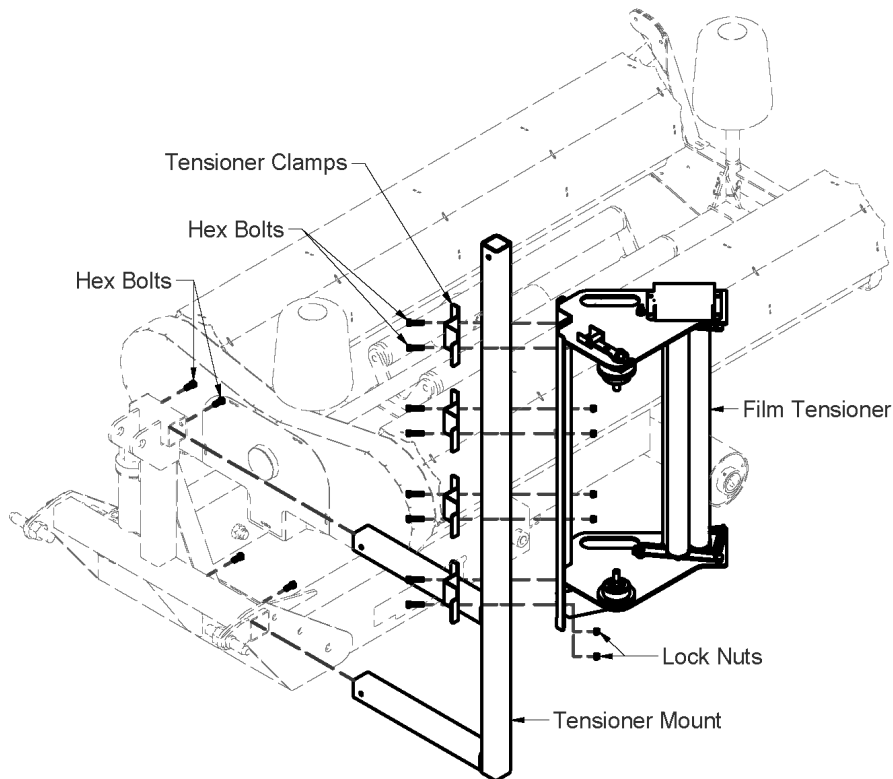

- Slide tensioner mount (35099) all the way into square tube at front of machine and secure with 4 locking bolts provided.
- Mount film tensioner to frame with clamps. See parts illustration for proper positioning. For bales less than 5' in diameter the lower clamp should be below the horizontal frame tube.

**Note:** Adjust up or down so that the wrap is applied across the mid section of the bale.

## Electrical Connection

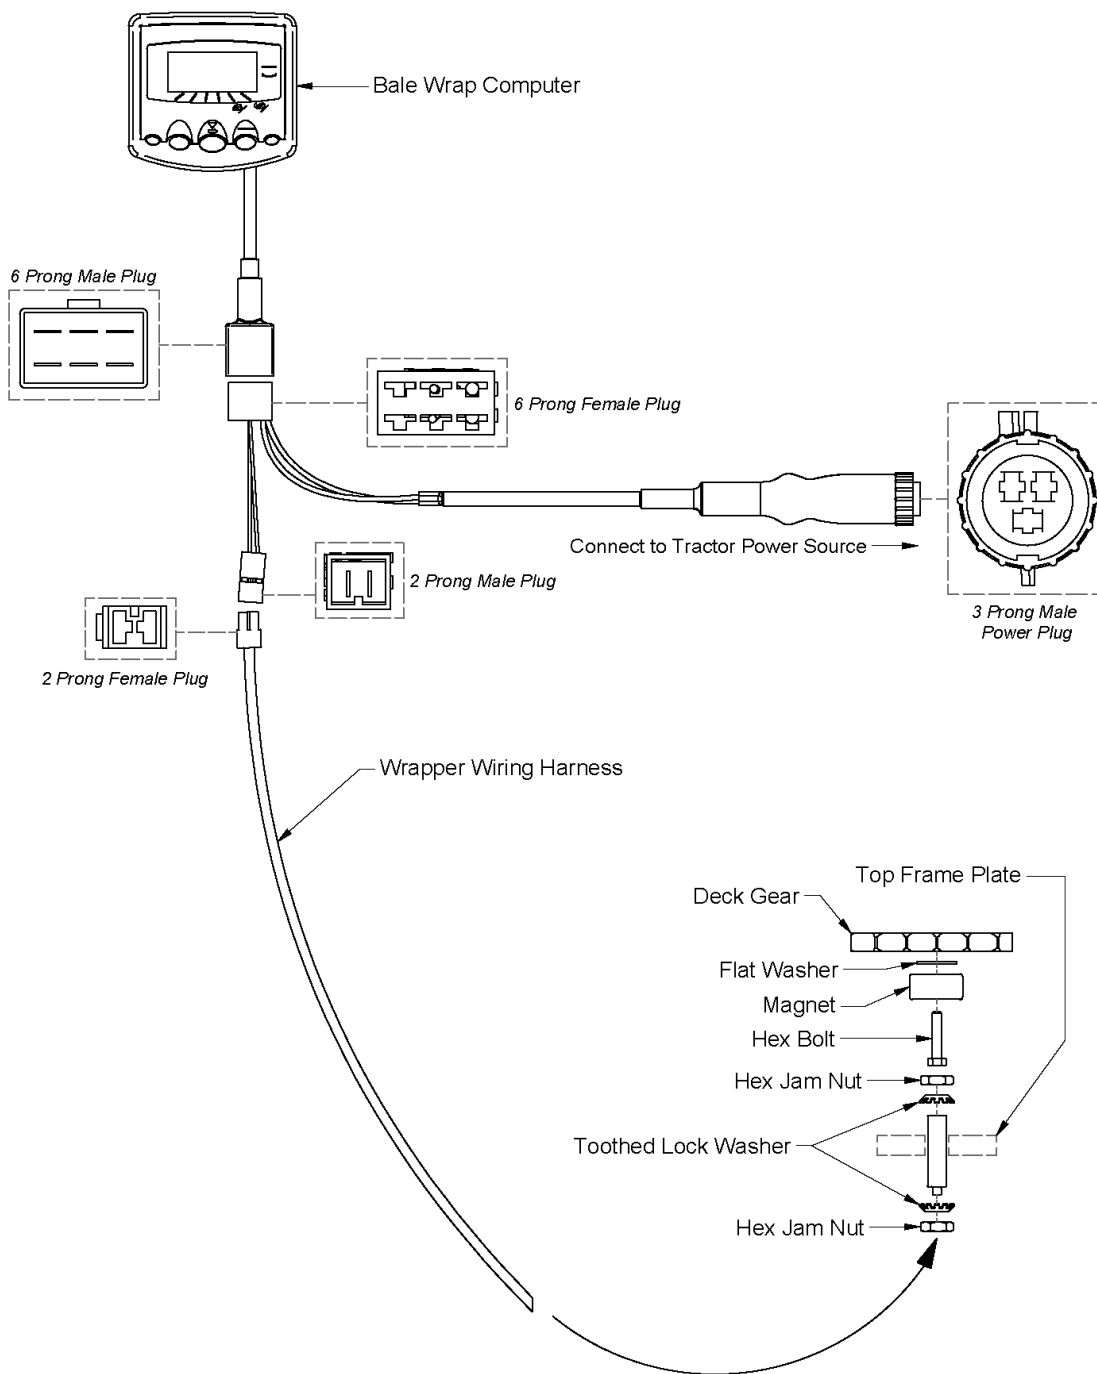

- Cut tie straps securing wrapper wiring harness to frame & connect to two prong plug in wiring harness.
- Mount Wrap Computer to suitable location on tractor with mounting hardware provided. Connect 6 pin plug from computer to wiring harness.
- Connect 3 prong male plug to power source in tractor. If tractor is not equipped with a matching female plug, one will need to be obtained and installed. Contact your local parts dealer.

*Intentionally Left Blank*

## Section 3: Operating Procedure

We suggest the following method of operating the TL1000R Tubeline Wrapper.

Before you start wrapping your bales you will need to attach the wrapper to the 3 point hitch on your tractor. You will also need to install a plastic film roll to wrap your bales with.

### To Install Plastic Wrap Film

Plastic from the factory has a natural tack on the inside. In the event of the plastic being stored for an extended period of time the tack may migrate to the opposite side. To test for tacky side fold plastic inside to inside and pull apart. Fold opposite way (top to top) to determine tackier side.

The roll of plastic should be installed with the tack on the inside of the plastic film next to the bale silage. The plastic then passes over the slave roller and is threaded through the two metal rollers on the Tensioner as shown in the diagram. The two metal stretcher rolls rotate at different speeds. This causes the plastic to be stretched. It is very important that the plastic goes over the slow roller first and the faster roll second. If there is any question, which is the faster roller:

Turn one roller by hand and watch the speed of the other roller, this should help you determine which is the fast and slow roller. When the plastic is installed correctly, it should stretch tight on the bale to form a smooth wrapped bale.

**Note:** See [page 1-5 \(DE36082\)](#) for illustration on wrap routing.

### Trouble Shooting Plastic Installation

Wrinkles in the plastic with seams between layers easily visible.

Check to determine if the plastic is properly routed through the Tensioner rollers.

Plastic tears between the Tensioner and the bale.

Film spool holders: not turning freely. Lubricate and turn by hand until free. Slave roller not turning freely. Lubricate and turn by hand until free.

Tensioner rolls not turning freely : Loosen the bolts holding the bearing and check if this makes a difference. It may be that the bearings have too much end pressure, in this case re-tighten the bearings and loosen the locking collar on the roller shaft this will allow the shaft to slide in the bearing; re-tighten the bearing collar. The gears can also be meshed too tight; this can be fixed by slightly loosening one set of bearing bolts. Using a hammer and punch, lightly tap the bearing away from the other roller.

**Caution** - Do not use a hammer on the aluminum stretcher rolls.

Poor quality plastic : Use a brand with good tear resistance.

Tack build up on the rollers: Particularly in hot weather. Clean the Tensioner with warm soapy water  
Plastic roll is too hot : In very hot weather the plastic can become soft if left in the sun for long periods of time. In these conditions, the spare rolls should be kept in the shade. After the rolls have been installed on the machine one can be parked on the bottom and a cover can be placed on the top one. Rolls of plastic may catch on the bottom of the bale. If bales are misshaped the roll of plastic may drag on the bottom of the bale, causing the plastic to break.



## To Wrap Bales

Choose a suitable wrapping site, preferably somewhere flat, and close to where you are planning to store your wrapped bales. Before placing the first bale onto the rollers make sure the wrapper is lowered to the ground and that the rollers are parallel to the tractor's axle, you are ready to wrap if you see the unload arrow decal (*DE36080, page 1-5*) on the front right corner of the rollers. Remove the transport lock and connect the hydraulic hoses to your tractor ports.

The film tensioner (*see page 4-10 for illustration*) should be adjusted so that the wrap is applied to the middle of the bale. If wrap is applied too high or low adjust tensioner by loosening clamps. Adjust tensioner as needed until wrap crosses the bale at its midpoint. As a guide, for a 4' or 4.5' diameter bale, the lower clamp (*Item 2 on page 4-10*) will be just below the cross bar under the tensioner.

### First Bale

After placing the first bale onto the wrapper you will need to tie the plastic film edge to the netting/twine of the bale. Keep the tractor at a steady RPM while engaging the hydraulic motor on the wrapper to allow a smooth wrapping job. We recommend 6-8 layers of wrap per bale. The speed of the turntable is controlled by the amount of oil flow from the tractor. If the tractor is equipped with a flow control, set it to achieve the desired RPM. In a tractor without a flow control, the operator will need to control the flow manually with the hydraulic lever and/or engine RPM. A poorly shaped bale, also a very large bale, will require a slower table speed. A smaller, firm, well shaped bale may be able to be wrapped at a faster RPM. However faster speeds may cause the bale to be thrown off the wrapper. Bystanders should always keep a safe distance from the wrapper during operation.

### Continuous Wrapping & Unloading

To unload the first bale make sure the unload arrow decal on the front right corner of the turntable is POINTING TOWARDS THE BACK of the machine. Next, raise the 3 point hitch on your tractor slowly. You should see the wrapper's frame rise up, while the wrapper tilts back, allowing the bale on the turntable to roll softly and safely to the ground. If you have not pulled out the transport pin the whole wrapper will raise off the ground instead of tilting. This machine has a feature that takes away the need to cut the plastic film after each bale is ejected from the turntable. When you load the next bale it will be sitting on top of plastic film stretched across the rollers. As you start wrapping each bale after the initial bale, a knife edge located on the rear left of the turntable will cleanly cut the wrap between the unloaded bale and the wrapper.

**Note :** *The turntable **MUST** be parallel with the tractor axle before loading each bale.*

**Note :** *Do **NOT** transport with bale on rollers.*

# Section 4: Bale Wrap Computer Operation

Please follow these instructions when operating the Bale Wrap Computer

*Bale Wrap Computer*

---

## 1. Introduction

The *Bale Wrap Computer* has 6 channel functions with an illuminated 4 digit LCD display, 3 switches to control all functions and an internal alarm. An external alarm is optional.


The instrument is normally powered on via the vehicle ignition circuit and recalls the function displayed when the instrument was last used.



### What can it do ?

- ?? Continuously displays the current number of wraps around the bale alongside the desired (Target) number of wraps preset by the operator.
- ?? Sounds an alarm at a preset number of wraps before the target number is reached.
- ?? Automatically senses when the bale wrap sequence ends and records it to each of these memory registers:
  - (i) Grand Total
  - (ii) Part Total
  - (iii) One of eight selectable Store Totals
- ?? Displays the number of bales wrapped per hour, within any desired time period.
- ?? Displays bale wrapping speed in r.p.m. and sounds an alarm when a preset speed is exceeded.

## 2. The Control Switches

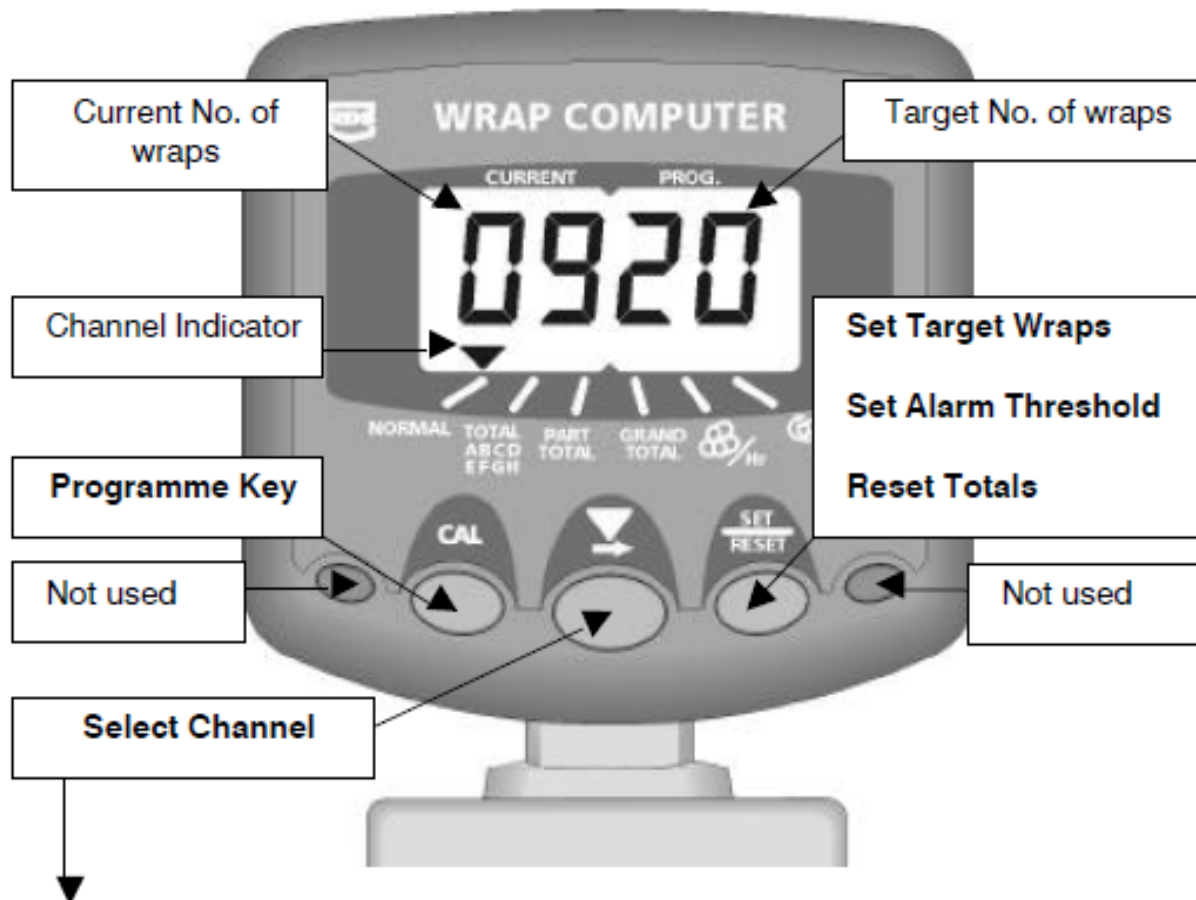There are **three** switches on the front panel used individually or in combination to programme, set/reset or select a function.



Channel 1	<b>NORMAL</b>	'Normal' display (Current/Target no. of Wraps)
Channel 2	<b>TOTAL</b> ABCD EFGH	Store Totals (A – H)
Channel 3	<b>PART</b> TOTAL	Part Total
Channel 4	<b>GRAND</b> TOTAL	Grand Total
Channel 5		Bale Wrapping Rate
Channel 6		Bale Wrapping Speed

### 3. Using the Instrument

#### 3.1 Channel 1 - Current/Target Wraps Display




The left hand section shows the current number of wraps and the right hand section shows the target number.

When the current number = Target number, the alarm will sound for 2 seconds and the display will flash. (If set, the early warning alarm sounds beforehand).

Automatic reset of current number to zero normally occurs 3 seconds after the Target number is reached. If additional wraps are added after the Target number is reached, the current number will continue to advance.

#### 3.1.1 Manually reset Current No. of Wraps to Zero

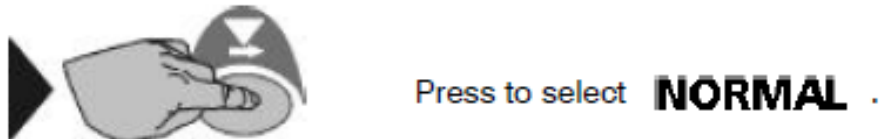

### 3.1.2 Programme the Target Wraps



Press to select **NORMAL**.



Hold continuously.



*The third digit flashes.*



Hold to cycle to the required digit then release, otherwise press once...



*The fourth digit flashes.*



Hold to cycle to the required digit.


Release all.

### 3.1.3 Programme Early Warning Alarm

An early warning alarm can be programmed to sound from 1 to 9 wraps before the target number is reached. Depending on the setting, the alarm will sound long beeps for up to 8 wraps, short beeps for the final wrap, and then a continuous beep for three seconds.

For example, if the bale requires 22 wraps and you want an alarm at 20 wraps, then set the number to 2.

To effectively disable the alarm, set the number to 0.

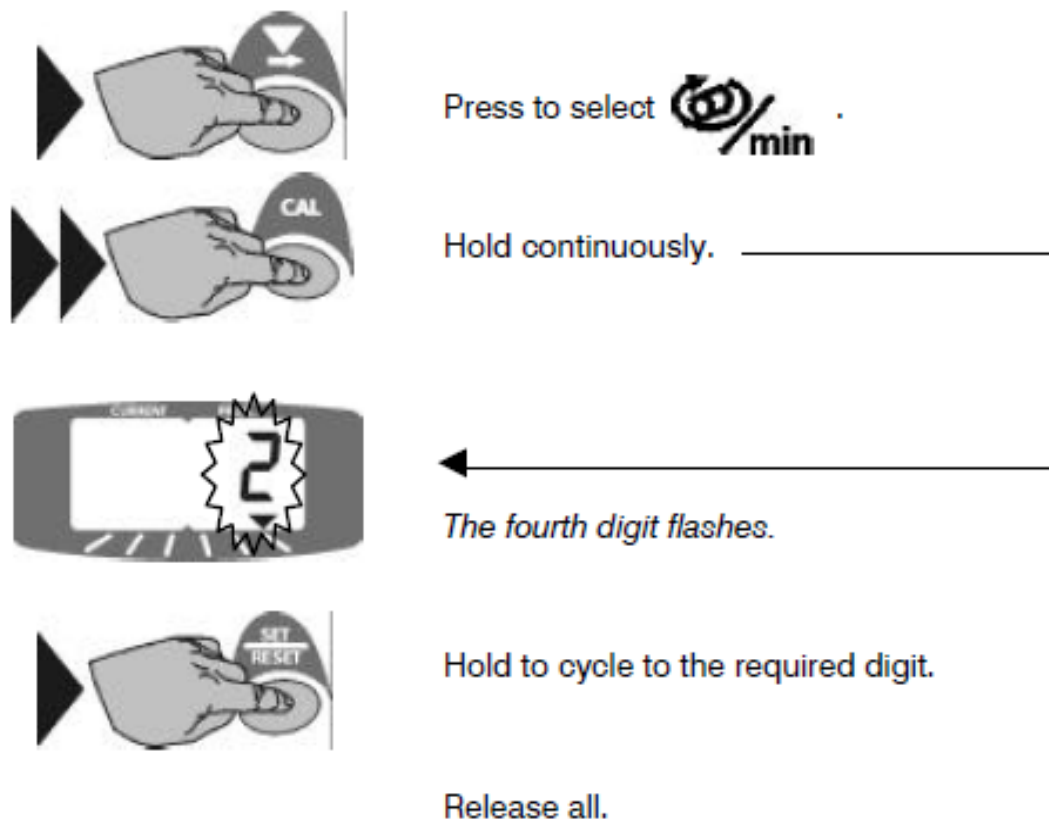

Press to select  $\text{@}/\text{min}$ .

Hold continuously.

The fourth digit flashes.

Hold to cycle to the required digit.

Release all.


## 3.2 Channel 2 - Store Totals

When bale wrap is complete, one of eight pre-selected memory store totals **A, b, C, d, E, F, G,** or **H**, is automatically advanced by 1. Store totals can be reset individually.

### 3.2.1 Display a Store Total



Press to select **TOTAL  
ABCD .  
EFGH**

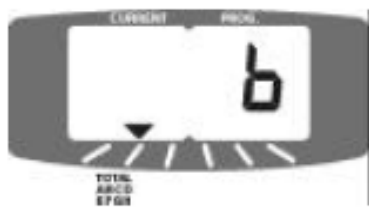

The fourth digit displays the current store designation for 2 seconds.



The current total for that store then displays for five seconds, then defaults to channel 1.

### 3.2.2 Select a Store Total



Press to select **TOTAL  
ABCD .  
EFGH**




Select the desired store total (A – H).



This is now the default store, and subsequent bale counts are stored there until another store is selected.



### 3.2.3 Reset a Store Total

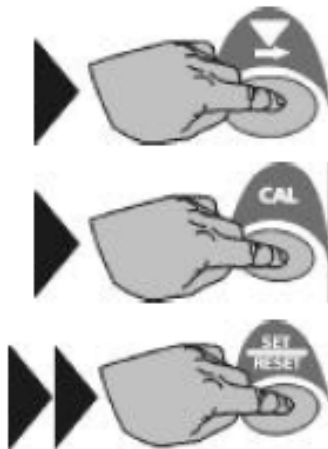

Press to select **TOTAL**  
**ABCD**  
**EFGH**

Select the desired store total (A – H).

Press and hold.

## 3.3 Channel 3 – Part Total

When the bale wrap is complete, the part total is automatically advanced by 1. The part total can be reset at any time


### 3.3.1 Display Part Total



Press to select **PART**  
**TOTAL**

*Part total displays for 5 seconds then defaults to channel 1.*

### 3.3.2 Reset Part Total

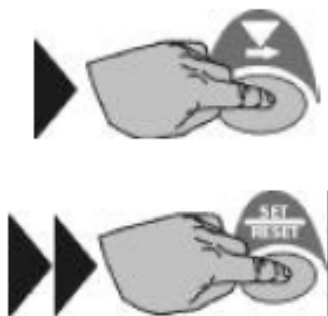

Press to select **PART**  
**TOTAL**


Press and hold.



### 3.4 Channel 4 - Grand Total

When the bale wrap is complete, the grand total is automatically advanced by 1. The grand total cannot be reset.


#### 3.4.1 Display Grand Total

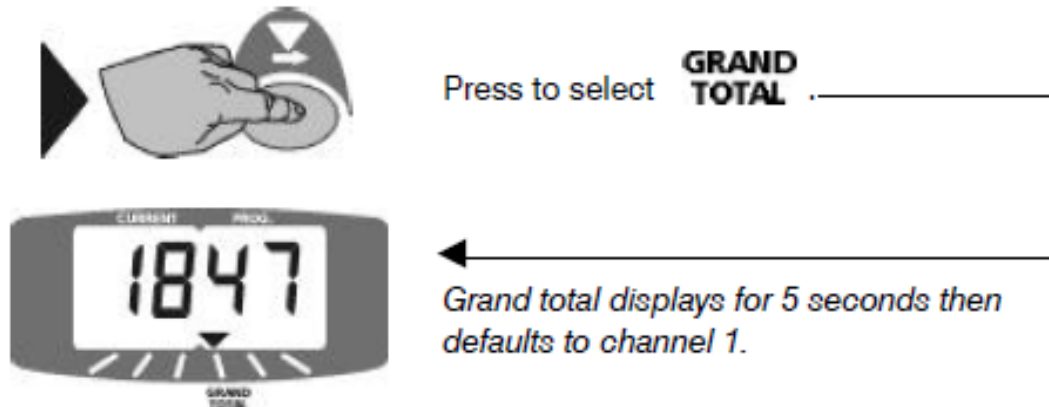

### 3.5 Channel 5 - Bale Wrapping Rate


Displays number of bales wrapped per hour. The time period over which the rate is averaged may be re-started at any time.

#### 3.5.1 Display Bale Wrapping Rate

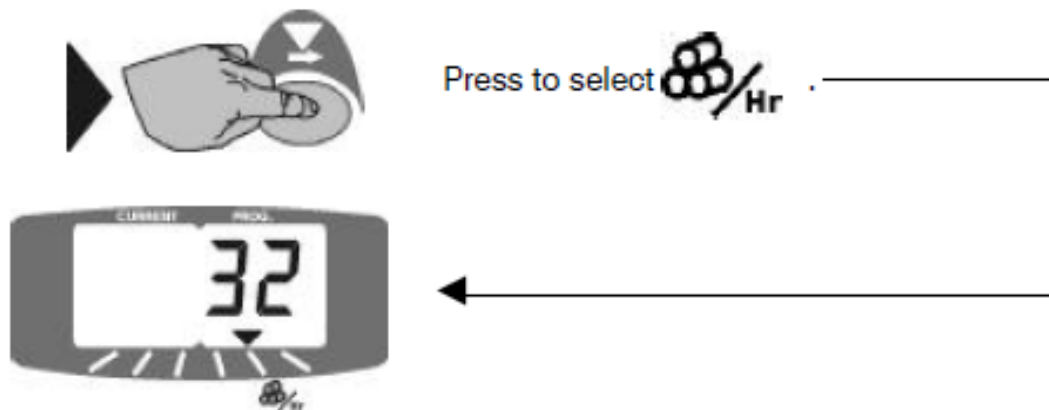

### 3.5.2 Reset Timing Period



Press to select  .




Press and hold.


## 3.6 Channel 6 - Bale Wrapping Speed

Displays instantaneous r.p.m. of the bale wrapper at 3 second intervals in the range 10-99 r.p.m. An overspeed alarm will sound if the r.p.m. exceeds a pre-programmable limit. The display will default to this channel and flash for the duration of the overspeeding, subsequently reverting to the 'current/target wraps' display.

### 3.6.1 Display Bale Wrapping Speed



Press to select  .

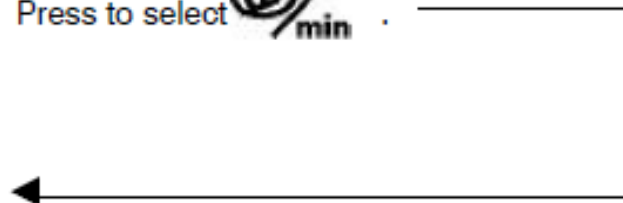

### 3.6.2 Programme the Overspeed Alarm



Switch power on while pressed.



Release.



The third digit flashes.



Hold to cycle to the desired digit, then release, otherwise press once...



The fourth digit flashes.



Hold to cycle to the required digit.

Release all.

### 3.7 Total Reset

---

If for some reason the data in the instrument is corrupted or the display shows '**PrOg**' then the instrument must be totally reset.

- . Switch power off.
- . Press and hold all 3 control switches.
- . Switch power on.
- . Release all switches.


All instrument settings should be returned to the factory-set values. If the display shows '**PrOg**' again, the instrument may be faulty and must be returned to the manufacturer for inspection and repair.

**NOTE :** *These instructions are provided solely for informative purposes only. Used with permission from Digi-Star International.*

*Intentionally Left Blank*

# Section 5: Parts Lists & Breakdowns

# Turntable

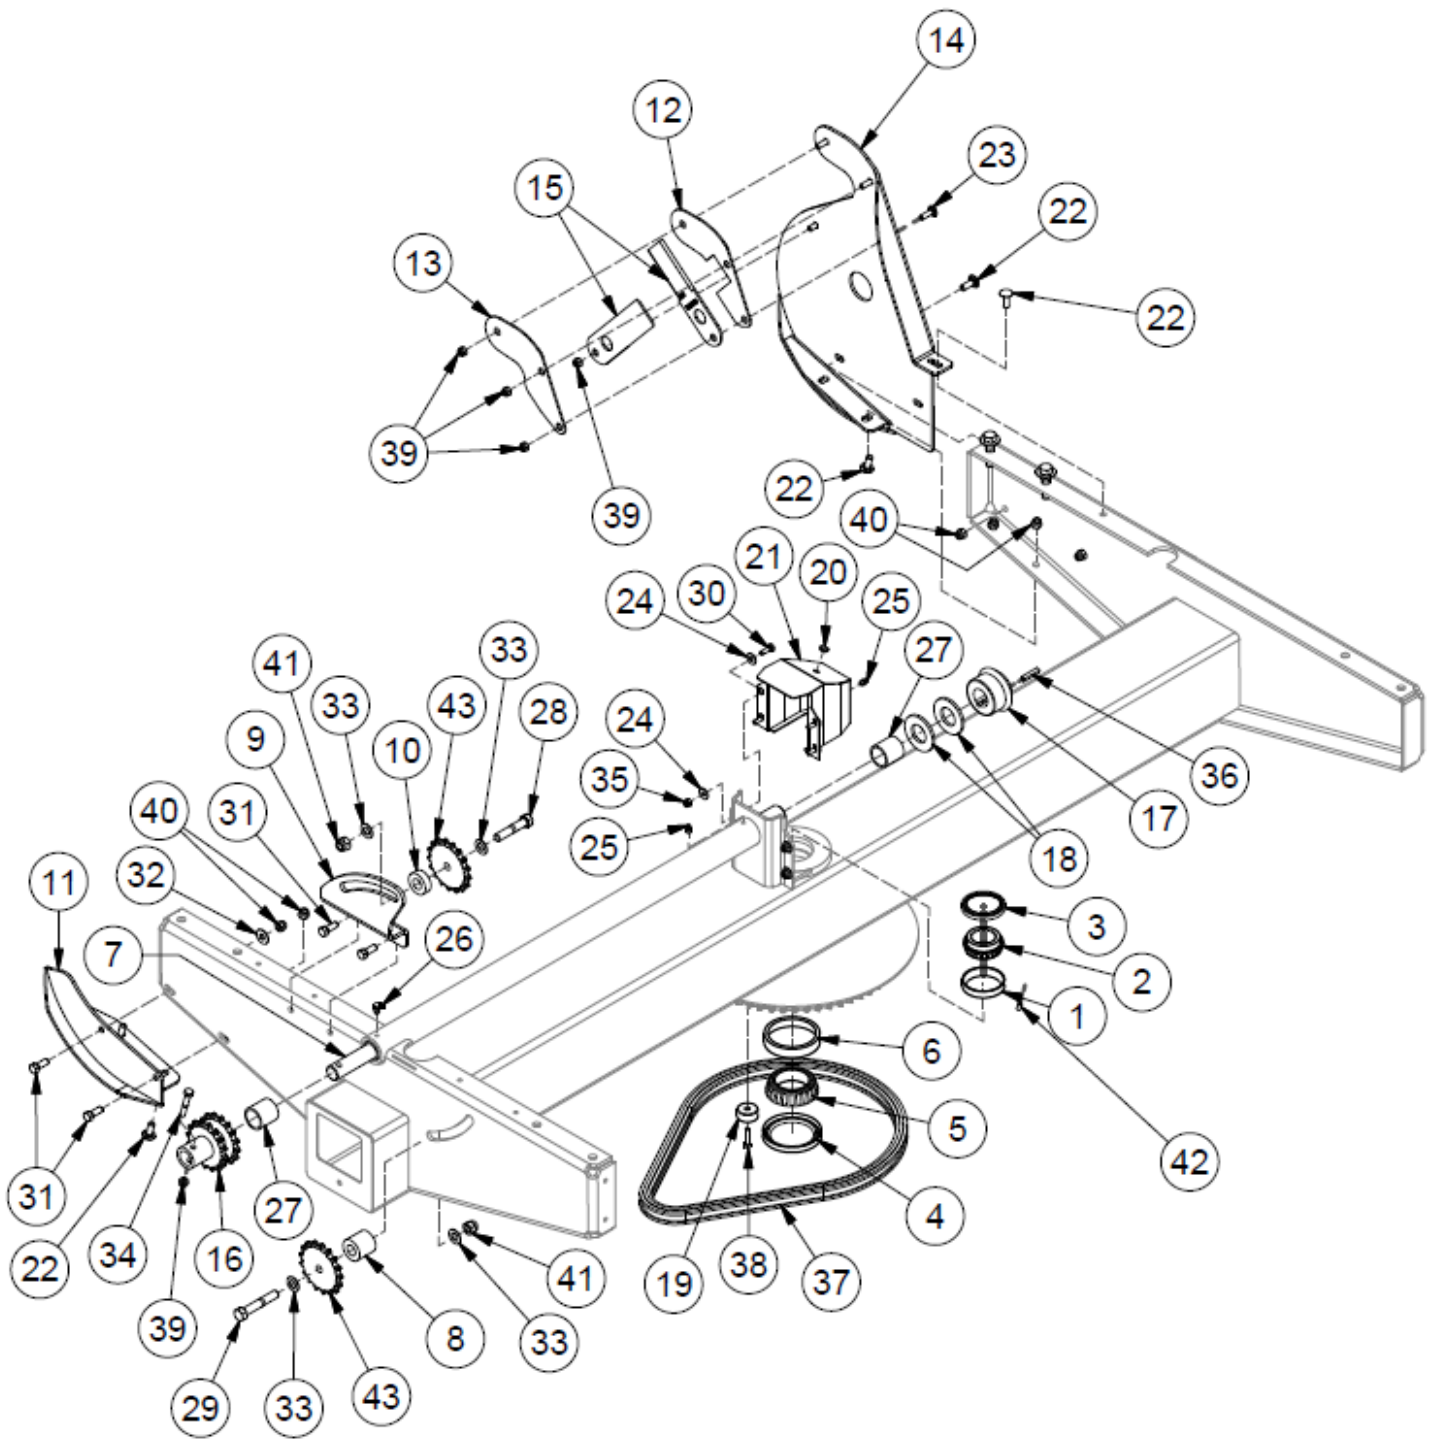


## Turntable

ITEM	QTY	PART NUMBER	DESCRIPTION	SERIAL BREAK
1	1	11-1009	Cup (13620)	
2	1	11-1010	Cone (13686)	
3	1	11-1011	Seal (CR20952)	
4	1	11-1124	Seal (CR27361)	
5	1	11-1125	Cone (JLM506849)	
6	1	11-1126	Cup (JLM506810)	
7	1	35036	Turntable Cross Shaft	
8	1	35050	Long Idler Spacer	
9	1	35051	Idler Mount	
10	1	35052	Short Idler Spacer	
11	1	35082	Skid Shoe	
12	1	35069	Middle Knife Holder	
13	1	35070	Inner Knife Holder	
14	1	35083	Outer Knife Holder	
15	2	BS200058	Knife	
16	1	35086	Large Sprocket Set	
17	2	35714	24 Tooth Gear	
18	3	35785	Miter Gear Spacer	
19	1	36254	Magnet	
20	1	42794	Plastic Plug	1810001 - Current
	1	35092	Grease Cover	Up to 1810001
21	1	42851	Grease Cover	1810001 - Current
22	7	CB 3/8-16 X1 Z5	Carriage Bolt - 3/8-16 x 1" Grade 5 Zinc	
23	3	CB 5/16-18 X1 Z5	Carriage Bolt - 5/16-18 x 1" Grade 5 Zinc	
24	8	FW 1/4	Flatwasher - 1/4" Zinc Plated USS	
25	4	GR.25X28	.25" Grease Fitting	
26	1	GR.25X28X90	.25" 90° Elbow Grease Fitting	
27	2	INS150125100B	Polymer Insert Bushing	
28	1	HB 1/2-13X2.5 Z5	Hex Bolt 1/2-13x2 1/2 Grade 5 Zinc Plated Hex Cap Screw	
29	1	HB 1/2-13X3 Z5	Hex Bolt 1/2-13x3 Grade 5 Zinc Plated Hex Cap Screw	
30	4	HB 1/4-20X0.75 Z5	Hex Bolt 1/4-20x3/4 Grade 5 Zinc Plated Hex Cap Screw	
31	8	HB 3/8-16X1 Z5	Hex Bolt 3/8-16x1 Grade 5 Zinc Plated Hex Cap Screw	
32	2	FW 3/8	Flatwasher - 3/8" Zinc Plated USS	
33	12	FW 1/2	Flatwasher - 1/2" Zinc Plated USS	
34	1	HB 5/16-18X2 Z5	Hex Bolt 5/16-18x2 Grade 5 Zinc Plated Hex Cap Screw	
35	4	LN 1/4 N	LN 1/4-20 Zinc Plated Nylon Insert Lock Nut	
36	2	KS40258	.25 x 1.375 Keyway	
37	1	Obtain Locally	5' #50 Chain + Sprocket	
38	1	HB M6X30X1	Metric Bolt	
39	5	LN 5/16 N	LN 5/16-18 Zinc Plated Nylon Insert Lock Nut	
40	12	LN 3/8 N	LN 3/8-16 Zinc Plated Nylon Insert Lock Nut	
41	2	LN 1/2 N	LN 1/2-13 Zinc Plated Nylon Insert Lock Nut	
42	2	SS 14X12	Allan Head Set Screw, 1/4-20 x 1/2	
43	2	SPR50A15	17 Tooth Sprocket	




# Rollers

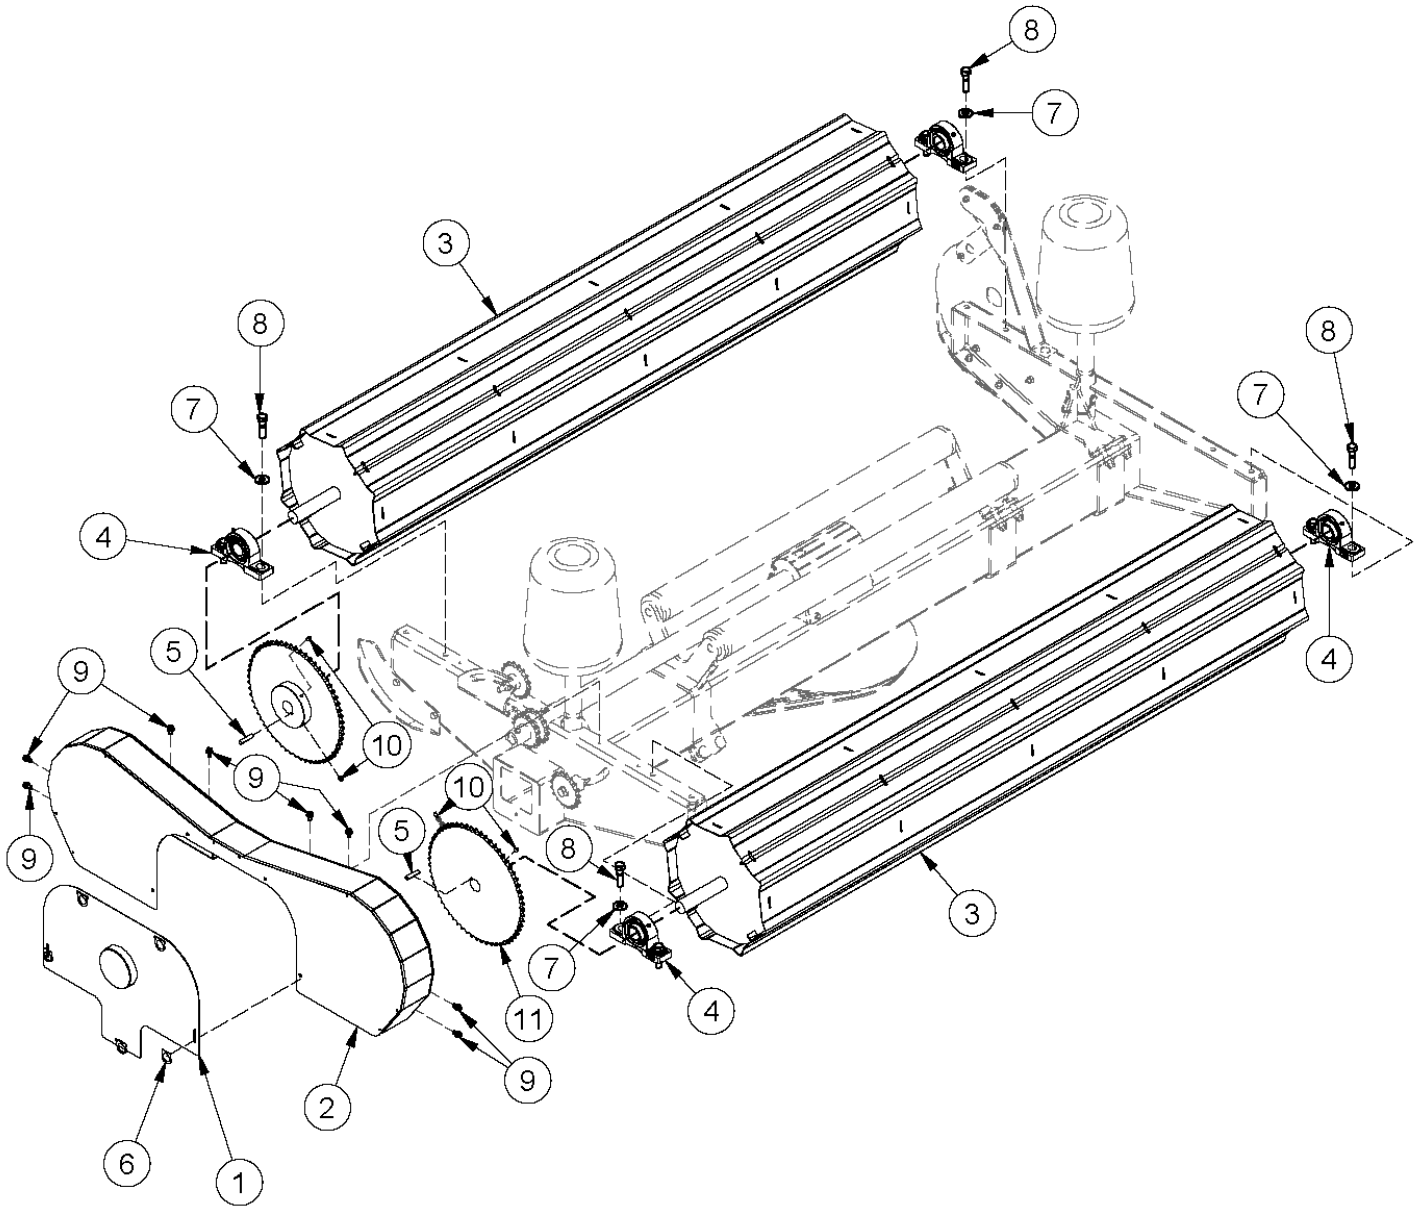

## Rollers

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	35088	Chain Cover
2	1	35090	Chain Guard
3	2	35094	Bale Rotater Drum
4	4	BEA UCP207-20NTL	Pillow Block Bushing
5	2	KS40254	Keystock .25 x 1
6	5	36268	Cam Lock
7	12	FW 1/2	Flatwasher - 1/2" Zinc Plated USS
8	8	HB 1/2-13X2 Z5	Hex Bolt 1/2-13x2 Grade 5 Zinc Plated Hex Cap Screw
9	8	HBC1/4X0.5	Hex Bolt Cerrated 1/4-20 x 1/2 Zinc Flange Bolt
10	4	SS 516X12	Allan Head Set Screw, 5/16-18 x 1/2
11	2	SPR50B60-1.25	Roller Chain Sprocket

# Middle Rollers

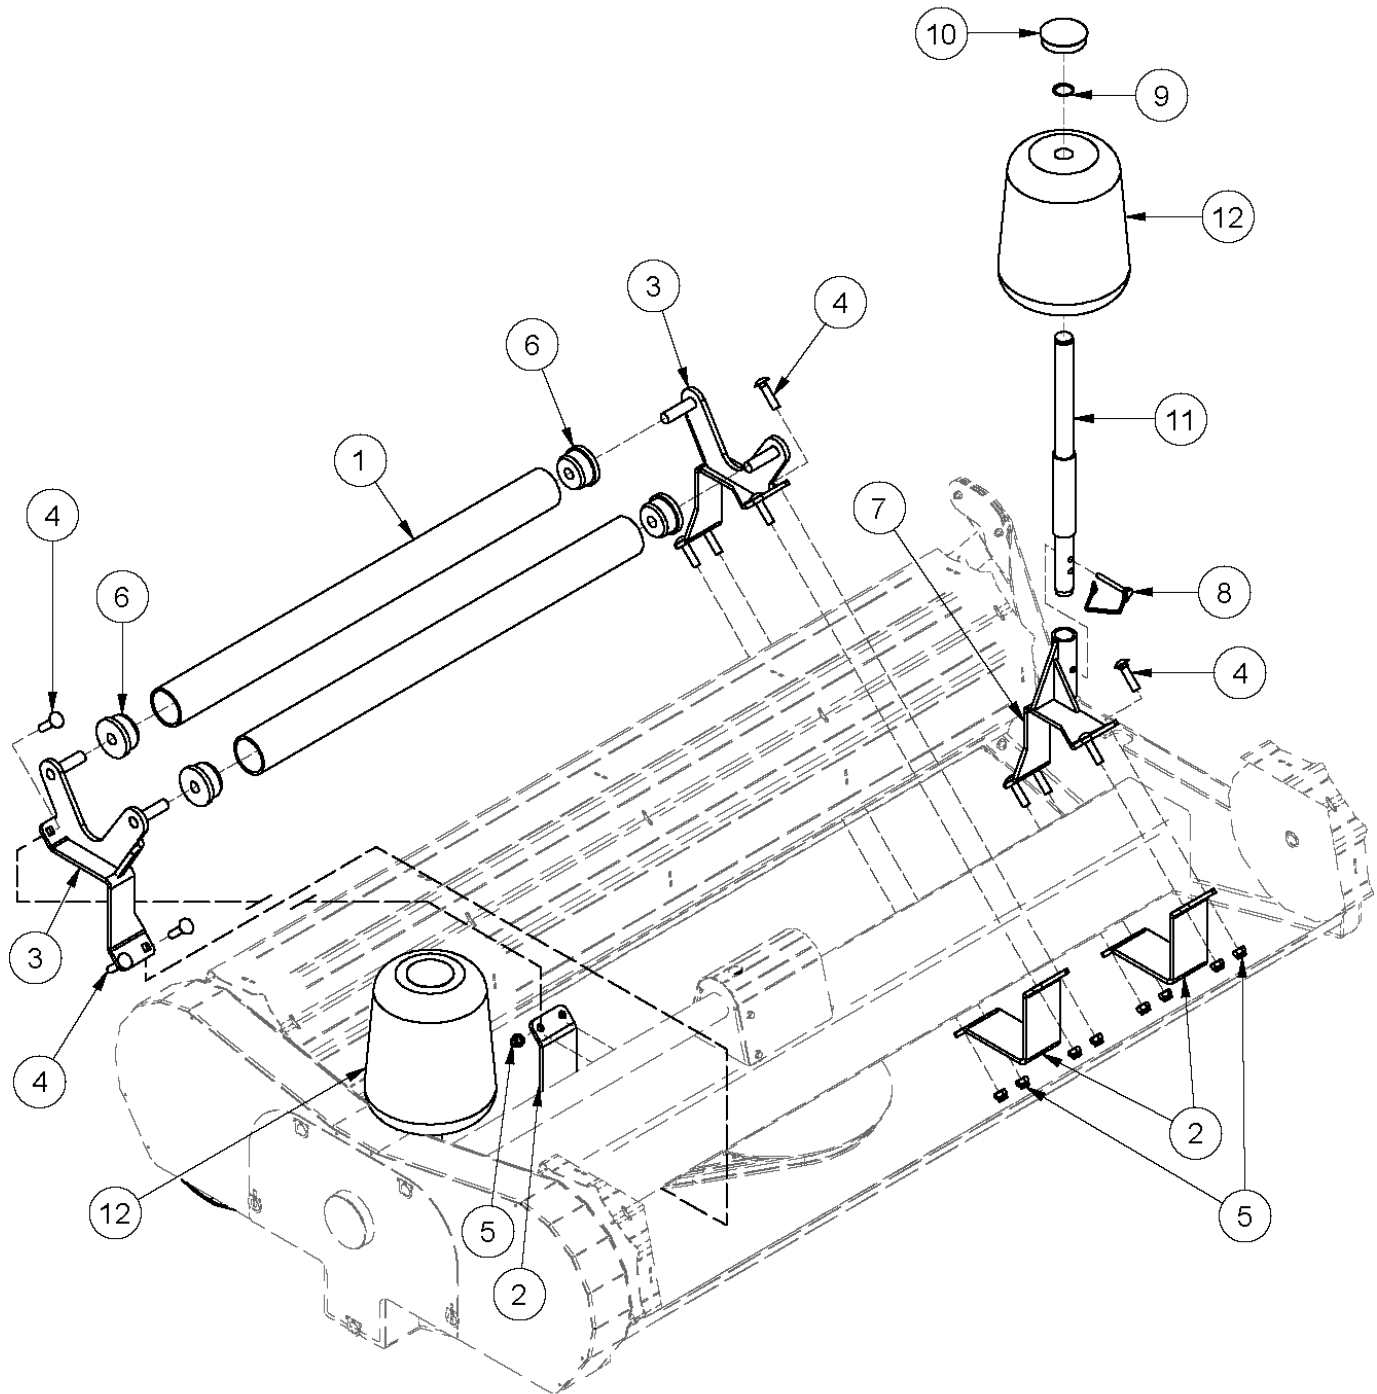


## Middle Rollers

*Note: Middle Rollers will retrofit to all TL1000R wrappers.*

ITEM	QTY	PART NUMBER	DESCRIPTION	SERIAL BREAK
1	2	31384	Middle Roller	
2	2	37977	Clamp Bracket	
3	2	37980	Middle Roller Mount Bracket	
4	4	T650RL04	Small Roller Bearing	
5	8	CB 1/2-13 X2 Z5	Carriage Bolt - 1/2-13 x 2" Grade 5 Zinc	
6	8	LN 1/2 N	LN 1/2-13 Zinc Plated Nylon Insert Lock Nut	
7	2	37984	Guide Roller Top Bracket	1510164 - Current
8	2	LP B1997	Lock Pin	
9	2	RR 1.25	Retaining Ring (Spaenaur No. R3100-125)	
10	2	TL245-057	3" Guide Roller Cap	
11	2	TL550-301-239	Guide Roller Shaft	
12	2	TLGRA	Guide Roller	

# Frame

Items 15,16,17,25,36 used up to Serial # 1610080

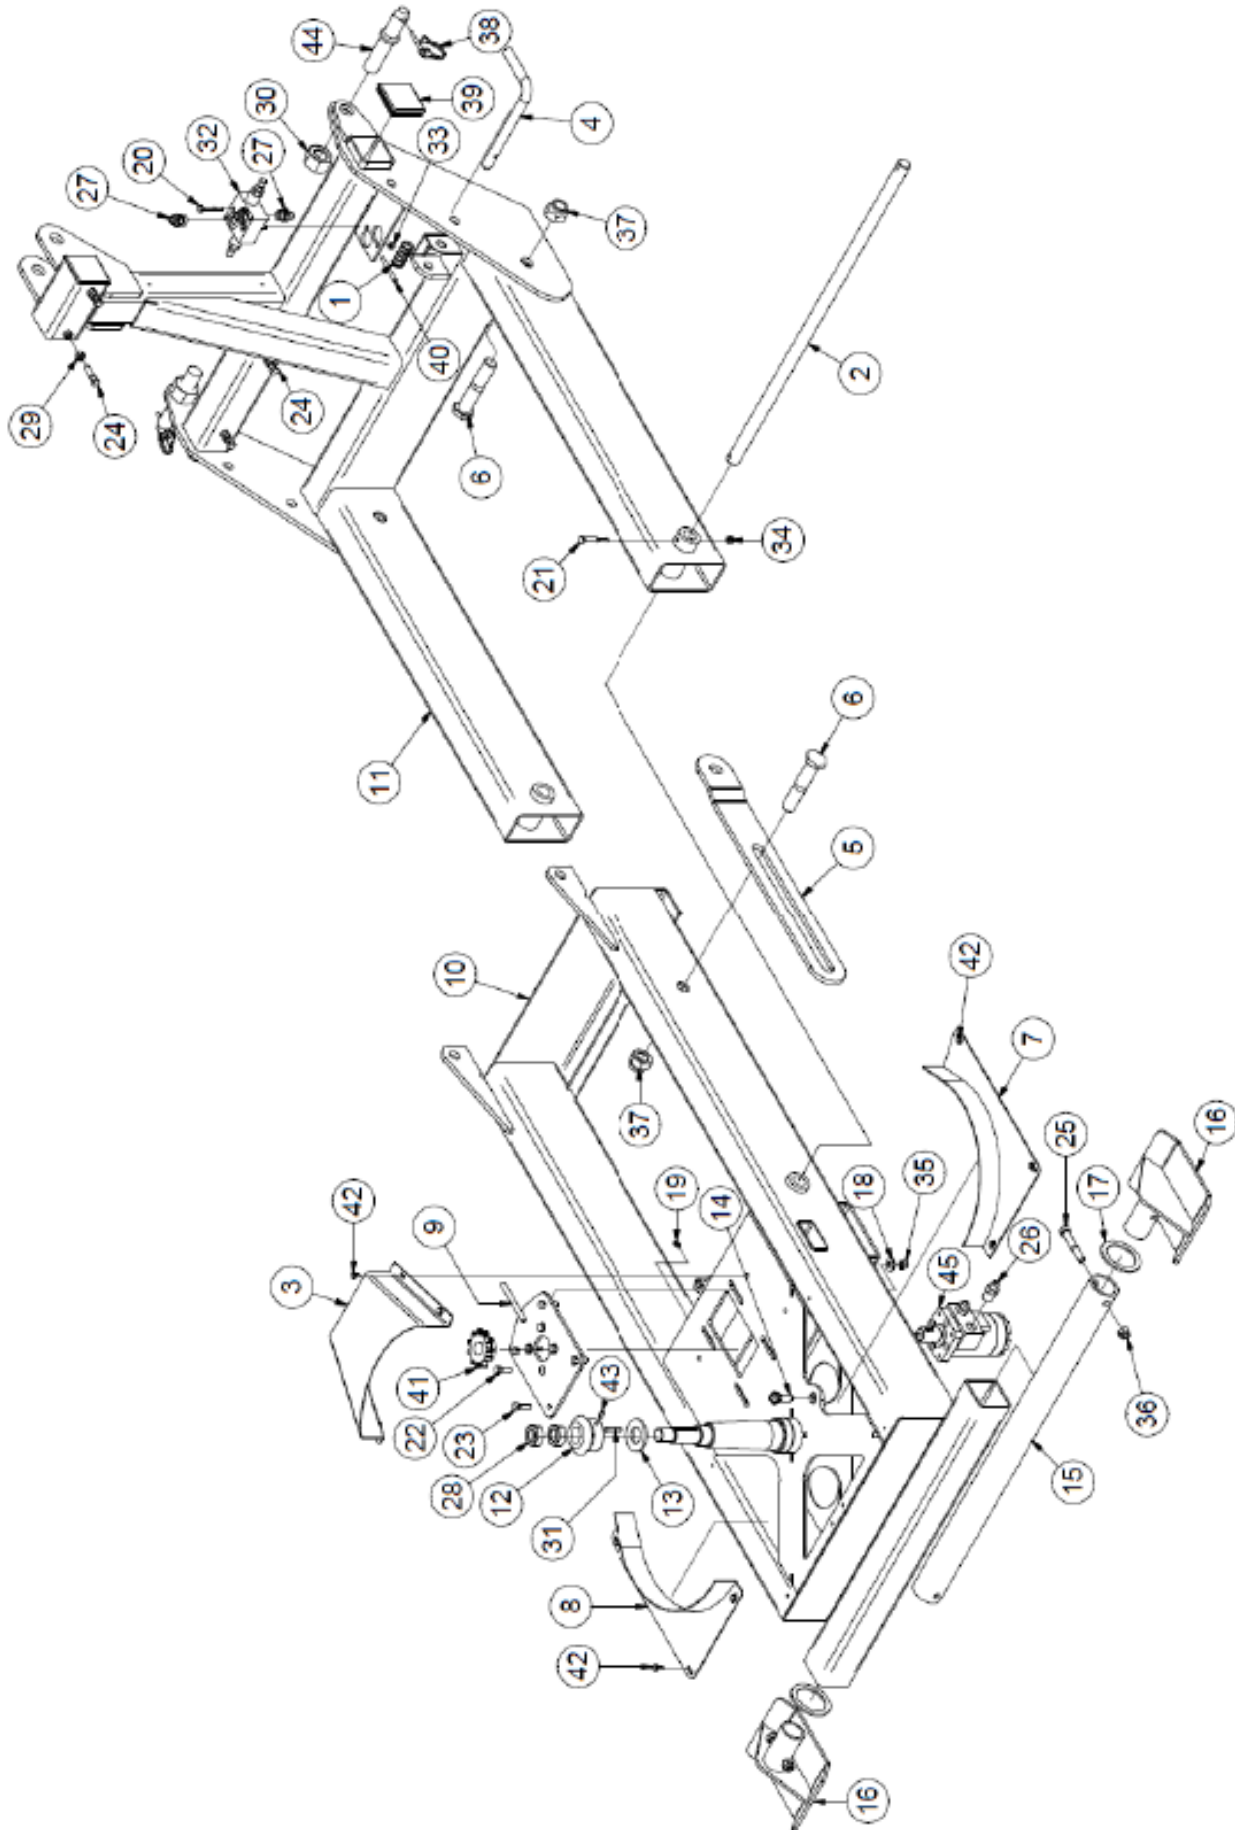


## Frame

*Items 15,16,17,25,36 used up to Serial # 1610080*

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	27566	Last Pushoff Spring Pin
2	1	35035	Frame Pivot Shaft
3	1	35046	Turntable Chain Cover
4	1	35055	Transport Lock Pin
5	1	35066	Tip Stop Link
6	2	35067	Machined Head Bolt
7	1	35084	Sprocket Shield
8	1	35084M	Sprocket Shield
9	1	35095	Chain Tightener
10	1	35096	Folding Main Frame
11	1	35097	Main Frame
12	1	35714	24 Tooth Gear
13	2	35785	Miter Gear Spacer
14	1	36253	Proximity Sensor w/ Wire Harness
15	1	36600	Pivot Tube
16	2	36604	Skid Shoe
17	2	36614	Washer
18		FW 3/8	Flatwasher Plated, 3/8" Zinc Plated USS
19		GR 1/4 X 28	Grease Fitting 1/4-28 Strght-Standrd Zerk
20		HB 1/4-20X2.0 Z5	Hex Bolt Plated Gr. 5 N.C (1200)
21		HB 5/16-18X2.1/4 Z5	Hex Bolt - 5/16-18 x 2-1/4 Grade 5 Zinc Hex Cap Screw
22		HB 3/8-16X1.0 Z5	Hex Bolt 3/8-16 x 1" Grade 5 Zinc Plated Hex Cap Screw NC
23		HB 3/8-16X1.1/4 Z5	Hex Bolt 3/8-16 x 1 1/4" Grade 5 Zinc Plated Hex Cap Screw NC
24		HB 3/8-16X1.1/2 Z5	Hex Bolt - 3/8-16 x 1 1/2" Grade 5 Zinc Plated Hex Cap Screw NC
25		HB 1/2-20X3.0 Z5	Hex Bolt 1/2"-20 x 3" Grade 5 Zinc Plated Hex Cap Screw NF
26		HF 2404-6-8	Hydraulic Fitting
27		HF 6400-6-8	Hydraulic Fitting
28		HN 1.0 JAM	Hex Nut - 1-14 Zinc Plated Hex Jam Nut (Half Thickness Nut)
29		HN 3/8	Hex Nut 3/8"-16 Grade 5 Zinc Plated Finished NC
30		HN 1.125	Hex Nut 1 1/8
31		Obtain Locally	KS 1/4 x 1 1/2 Keystock
32	1	LA-SB2000RV	Crossover Relief Valve
33		LN 1/4 N	Locknuts - 1/4-20 Zinc Plated Nylon Insert
34		LN 3/8 N	Locknuts - 3/8-16 Zinc Plated Nylon Insert Lock Nut
35		LN 1/2 N	Locknuts - 1/2-13 Zinc Plated Nylon Insert Lock Nut
36		LN 1/2 T	Locknuts - 1/2-20 Grade C Zinc Plated Top Lock Nut
37		LN 1.0 N	Locknuts - 1-8 Zinc Plated Nylon Insert
38	2	LP B1995	Pin - Lock Pin 1/4x1 3/4
39	2	PEC2518S	Plastic End Cap
40		RP 1/4X2.1/2	Pin - Roll Pin 1/4 x 2 1/2" (Slotted Spring Pin)
41	1	SPR60B11	Sprocket
42		SS 14X12	Allan Head Set Screw, Cup Point Set Screw 1/4 x 1/2
43		SS 5/16X1/2	*Set Screw 5/16, 1/2 Long, Black
44	2	TL386012	3 Point Hitch Pin
45	1	TL5X2-200-050	Hydraulic Motor
	4	35710	HH 3/8" x 66" (6FJX,6FJX) Hydraulic Hose

# Frame (Current)

Items 14-19 used from Serial # 1610081 to current.

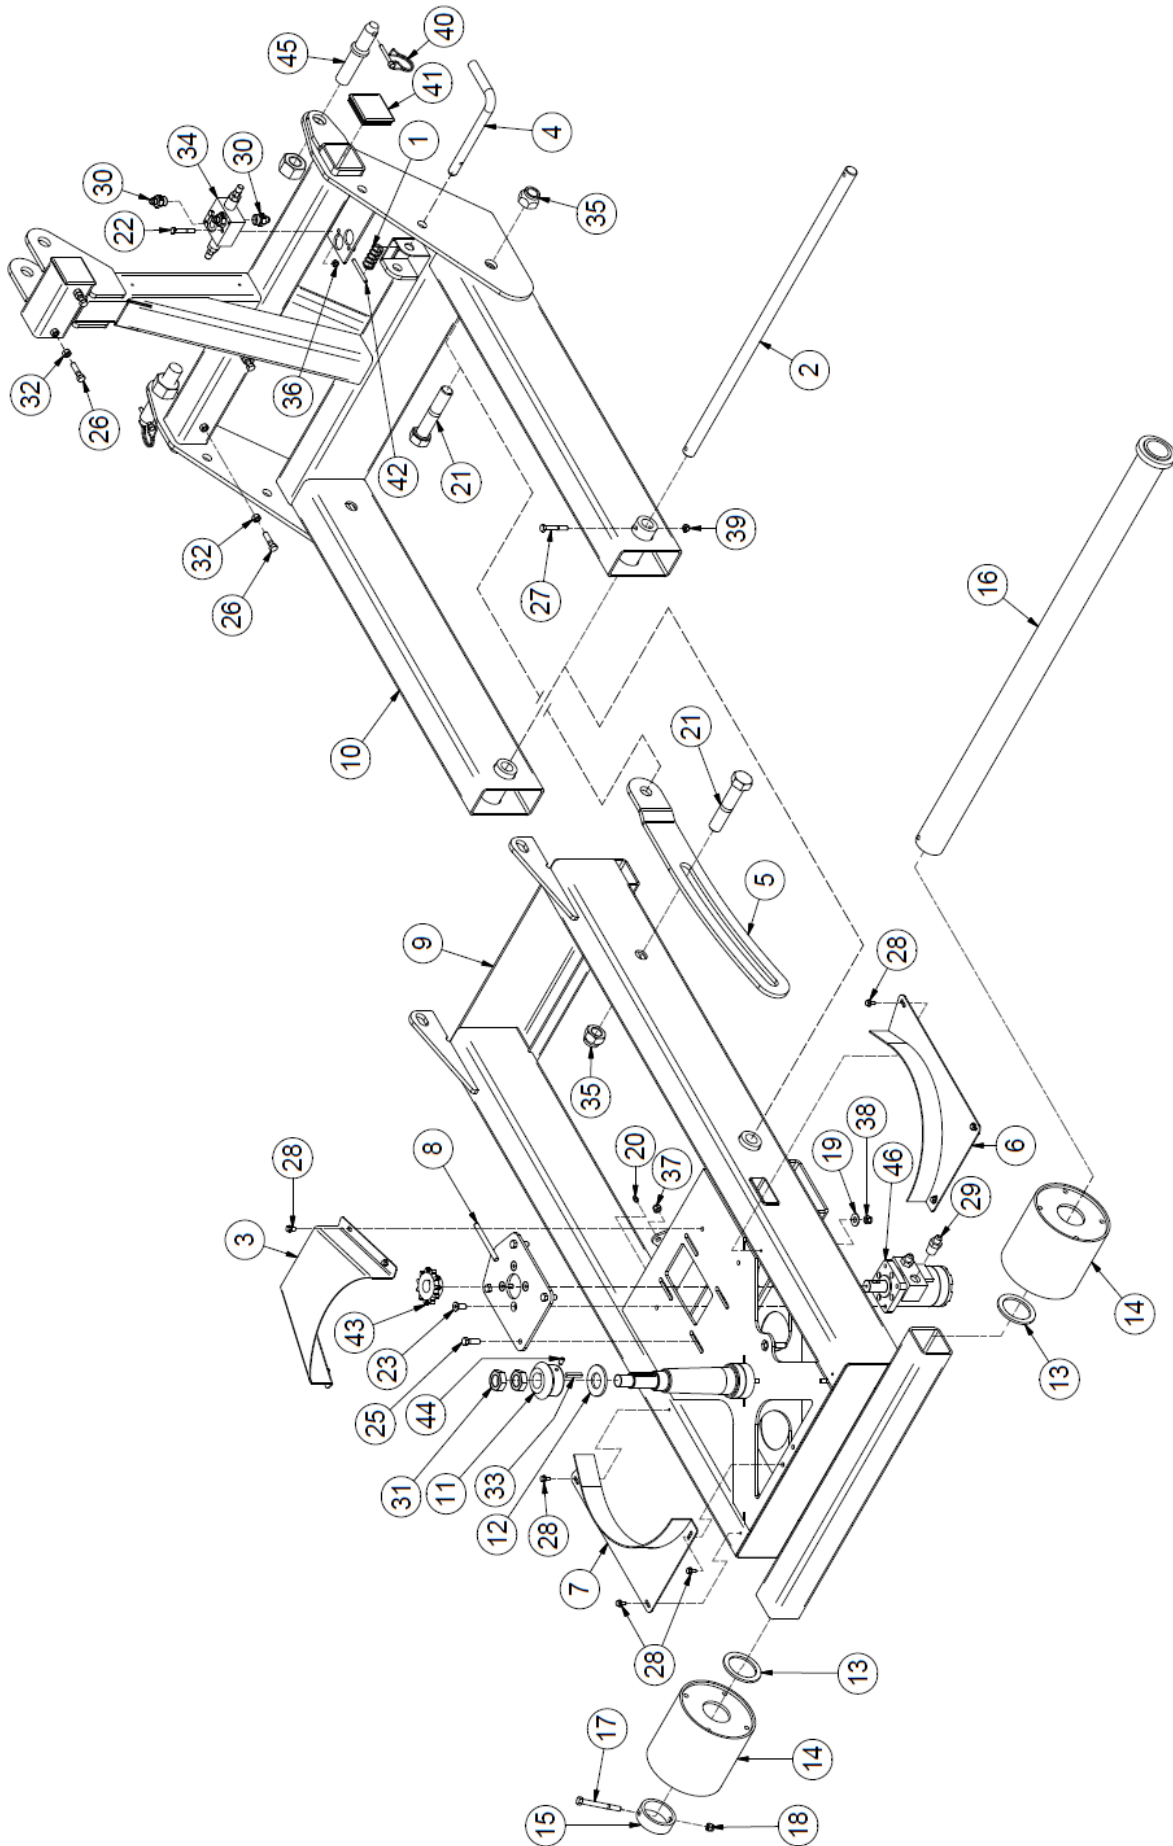



## Frame (Current)


*Items 14-19 used from Serial # 1610081 to current.*

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	27566	Last Pushoff Spring Pin
2	1	35035	Frame Pivot Shaft
3	1	35046	Turntable Drive Chain Cover
4	1	35055	Transport Lock Pin
5	1	35066	Top Stop Link
6	1	35084	Right Sprocket Shield
7	1	35084M	Left Sprocket Shield
8	1	35095	Chain Tightener
9	1	35096	Folding Main Frame
10	1	35097	Main Frame
11	1	35714	24 Tooth Gear
12	1	35785	Miter Gear Spacer
13	2	36614	Washer
14	2	39822	Ground Roller
15	1	39823	Collar
16	1	39839	Axle
17	1	HB 3/8-16X3.5 Z5	Hex Bolt 3/8-16x3 1/2 Grade 5 Zinc Plated Hex Cap Screw
18	1	LN 3/8 N	LN 3/8-16 Zinc Plated Nylon Insert Lock Nut
19	4	FW 3/8	Flatwasher - 3/8" Zinc Plated USS
20	2	GR.25X28	GR .25 Grease Fitting
21	2	HB 1-8X5 Z5	Hex Bolt 1-8x5 Grade 5 Zinc Plated Hex Cap Screw
22	2	HB 1/4-20X2 Z5	Hex Bolt 1/4-20x2 Grade 5 Zinc Plated Hex Cap Screw
23	4	HB 3/8-16X1 FHSCS	Hex Bolt - 3/8"-16 x 1" Flat Socket Cap Screw
24	1	HB 3/8-16X1 Z5	Hex Bolt 3/8-16x1 Grade 5 Zinc Plated Hex Cap Screw
25	3	HB 3/8-16X1.25 Z5	Hex Bolt 3/8-16x1 1/4 Grade 5 Zinc Plated Hex Cap Screw
26	4	HB 3/8-16X1.5 Z5	Hex Bolt 3/8-16x1 1/2 Grade 5 Zinc Plated Hex Cap Screw
27	2	HB 5/16-18X2.25 Z5	Hex Bolt 5/16-18x2 1/4 Grade 5 Zinc Plated Hex Cap Screw
28	10	HBC1/4X0.5	Hex Bolt Cerrated 1/4-20 x 1/2 Zinc Flange Bolt
29	2	HF 2404-6-8	Hydraulic Fitting
30	4	HF 6500-6-8	Hydraulic Fitting
31	2	HN 1 JAM	Hex Nut - 1-12 Zinc Plated Hex Jam Nut
32	4	HN 3/8	Hex Nut 3/8"-16 Grade 5 Zinc Plated Finished
33	1	KS41749	Keystock .25 x 1.5
34	1	LA-SB2000RV	Crossover Relief Valve
35	2	LN 1 N	LN 1-8 Zinc Plated Nylon Insert Lock Nut
36	2	LN 1/4 N	LN 1/4-20 Zinc Plated Nylon Insert Lock Nut
37	1	LN 3/8 F	Center Locknuts (3/8-24) 2-Way Fine Thread
38	4	LN 3/8 N	LN 3/8-16 Zinc Plated Nylon Insert Lock Nut
39	2	LN 5/16 N	LN 5/16-18 Zinc Plated Nylon Insert Lock Nut
40	2	LP B1995	Lock Pin
41	2	PEC2518S	3' Plastic End Cap
42	1	RP 1/4 x 2 1/2	Pin - Roll Pin 1/4 x 2 1/2
43	1	SPR60B11	11 Tooth Sprocket
44	1	SS 516X	Allan Head Set Screw, 5/16-18 x 1/2
45	2	TL386012	3 Point Hitch Pin c/w Nut
46	1	TL5X2-200-050	Hydraulic Motor



# Film Tensioner

Up to serial no.1810001

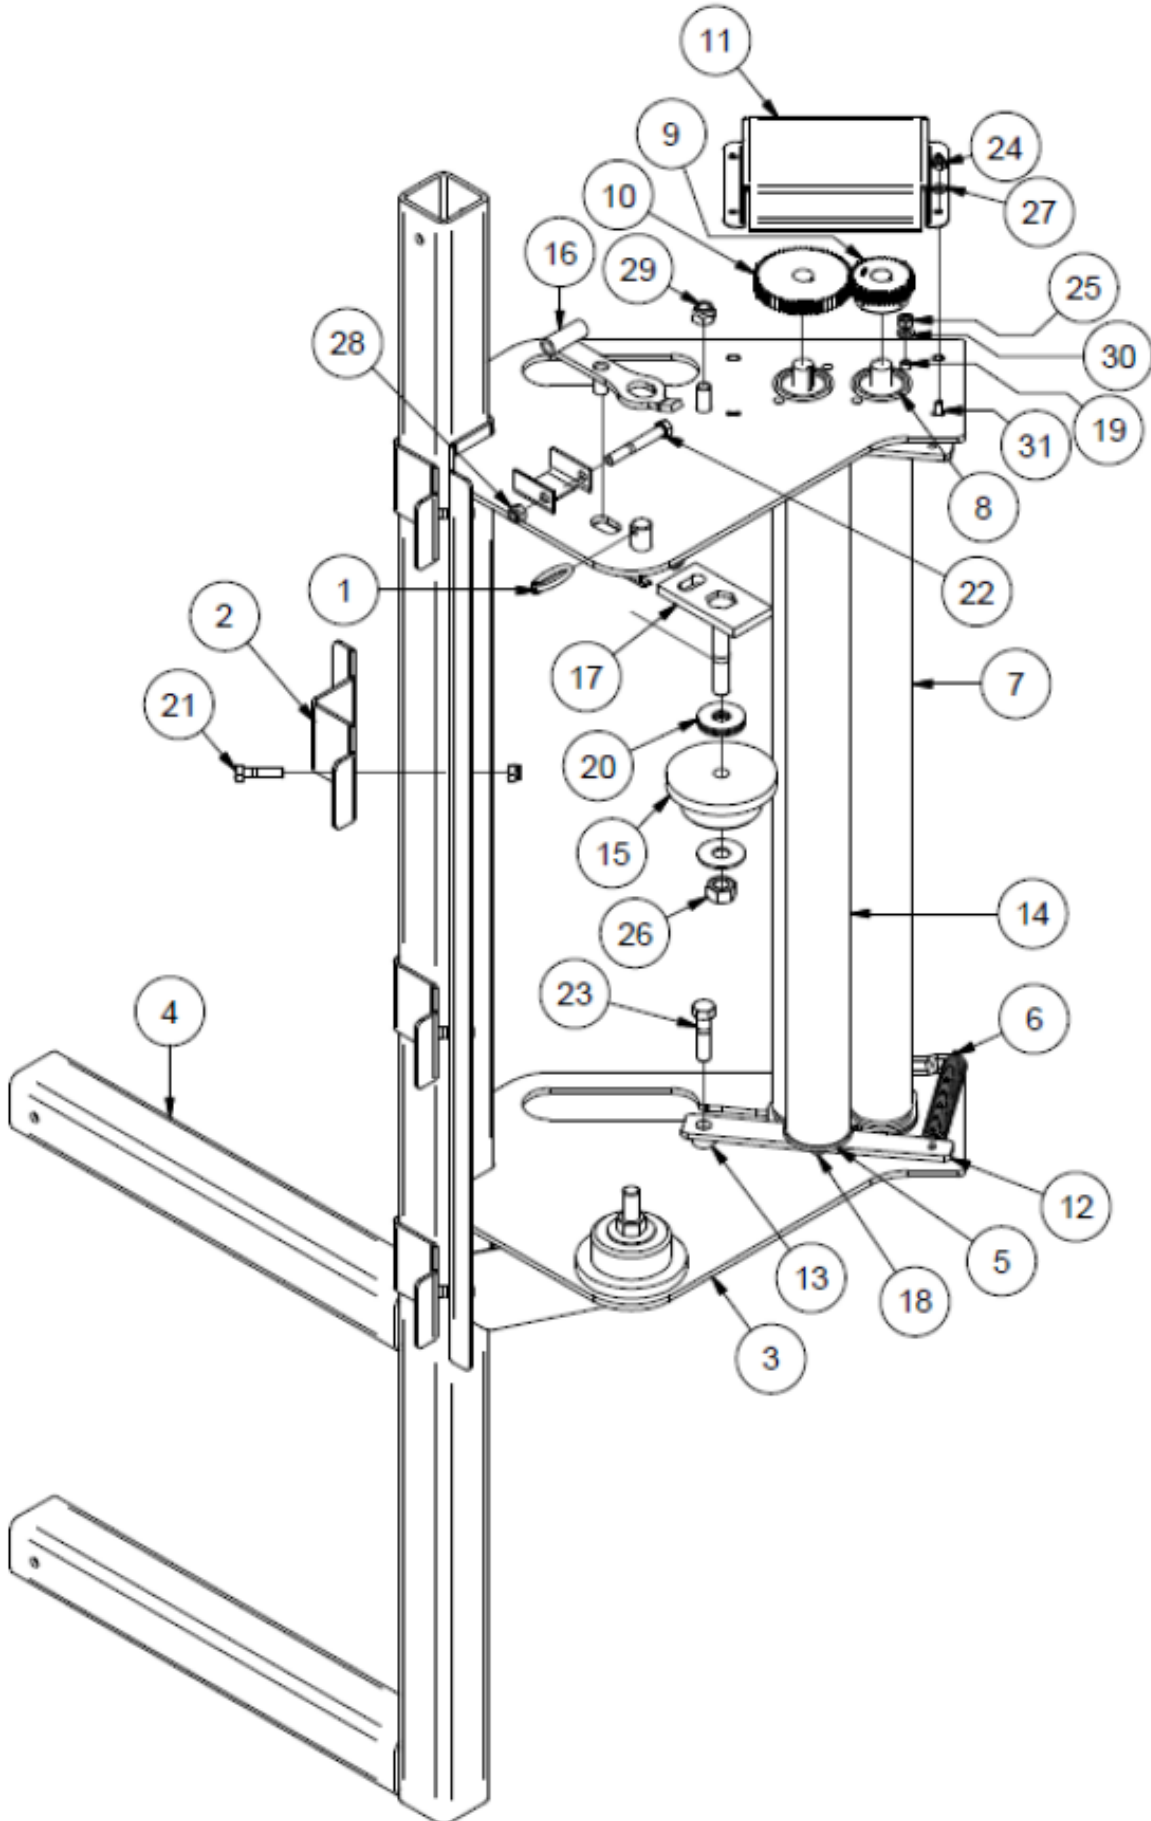


## Film Tensioner

Up to serial no.1810001

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	TL385501	Lynch Pin 3/16 x 1.5
2	4	35019	Tensioner Mount Bracket
3	1	35091	Tensioner Frame
4	1	35099	Tensioner Mount
5	2	TL500-100-021	Plastic Roller Cap
6	1	TL500-100-135	Tension Spring
7	2	TL550-100-006	Tensioner Roller
8	4	TL550-100-007	3/4 Flange Bearing
9	1	TL550-100-008	Small Roller Gear
10	1	TL550-100-009	Large Roller Gear
11	1	TL550-100-010	Grease Box
12	2	TL550-100-016	Plastic Roller Mount
13	2	TL550-100-017	Roller Mount Spacer
14	1	TL550-100-022	Plastic Roller
15	2	TL550-200-012	Plastic Wrap Spool
16	1	TL550-200-103	Spool Latch
17	1	TL550-200-115	Spool Holder
18	1	TL553034	Plastic Roller Pin
19	8	CB 5/16-18X 3/4 Z5	Carriage Bolt - 5/16-18 x 3/4" Zinc Plated Grade 5
20	6	FW 5/8	Flatwasher - 5/8" Zinc Plated USS
21	8	HB 3/8-16X1.1/2 Z5	Hex Bolt - 3/8-16 x 1 1/2" Grade 5 Zinc Plated Hex Cap Screw NC
22	1	HB 3/8-16X2.3/4 Z5	Hex Bolt 3/8"-16 x 2-3/4" Grade 5 Zinc Plated Hex Cap Screw NC
23	2	HB 1/2-13X2.0 Z5	Hex Bolt 1/2-13 x 2" Grade 5 Zinc Plated Hex Cap Screw NC
24	4	HN 1/4	Hex Nut 1/4"-20 Grade 5 Zinc Plated Finished NC
25	8	HN 5/16	Hex Nut 5/16"-18 Grade 5 Zinc Plated Finished Hex Nut NC
26	2	HN 5/8	Hex Nut - 5/8"-11 Grade 5 Zinc Plated Finished NC
27	4	LW 1/4	Lockwasher - 1/4" Zinc Plated Medium Split
28	9	LN 3/8 N	Locknuts - 3/8-16 Zinc Plated Nylon Insert Lock Nut
29	2	LN 1/2 N	Locknuts - 1/2-13 Zinc Plated Nylon Insert Lock Nut
30	8	LW 5/16	Lockwasher - 5/16" Zinc Plated Medium Split
31	4	MS 10X34	Machine Screw - #10-24 x 3/4

# Offset Film Tensioner

Serial no.1810001 to current, retrofittable.

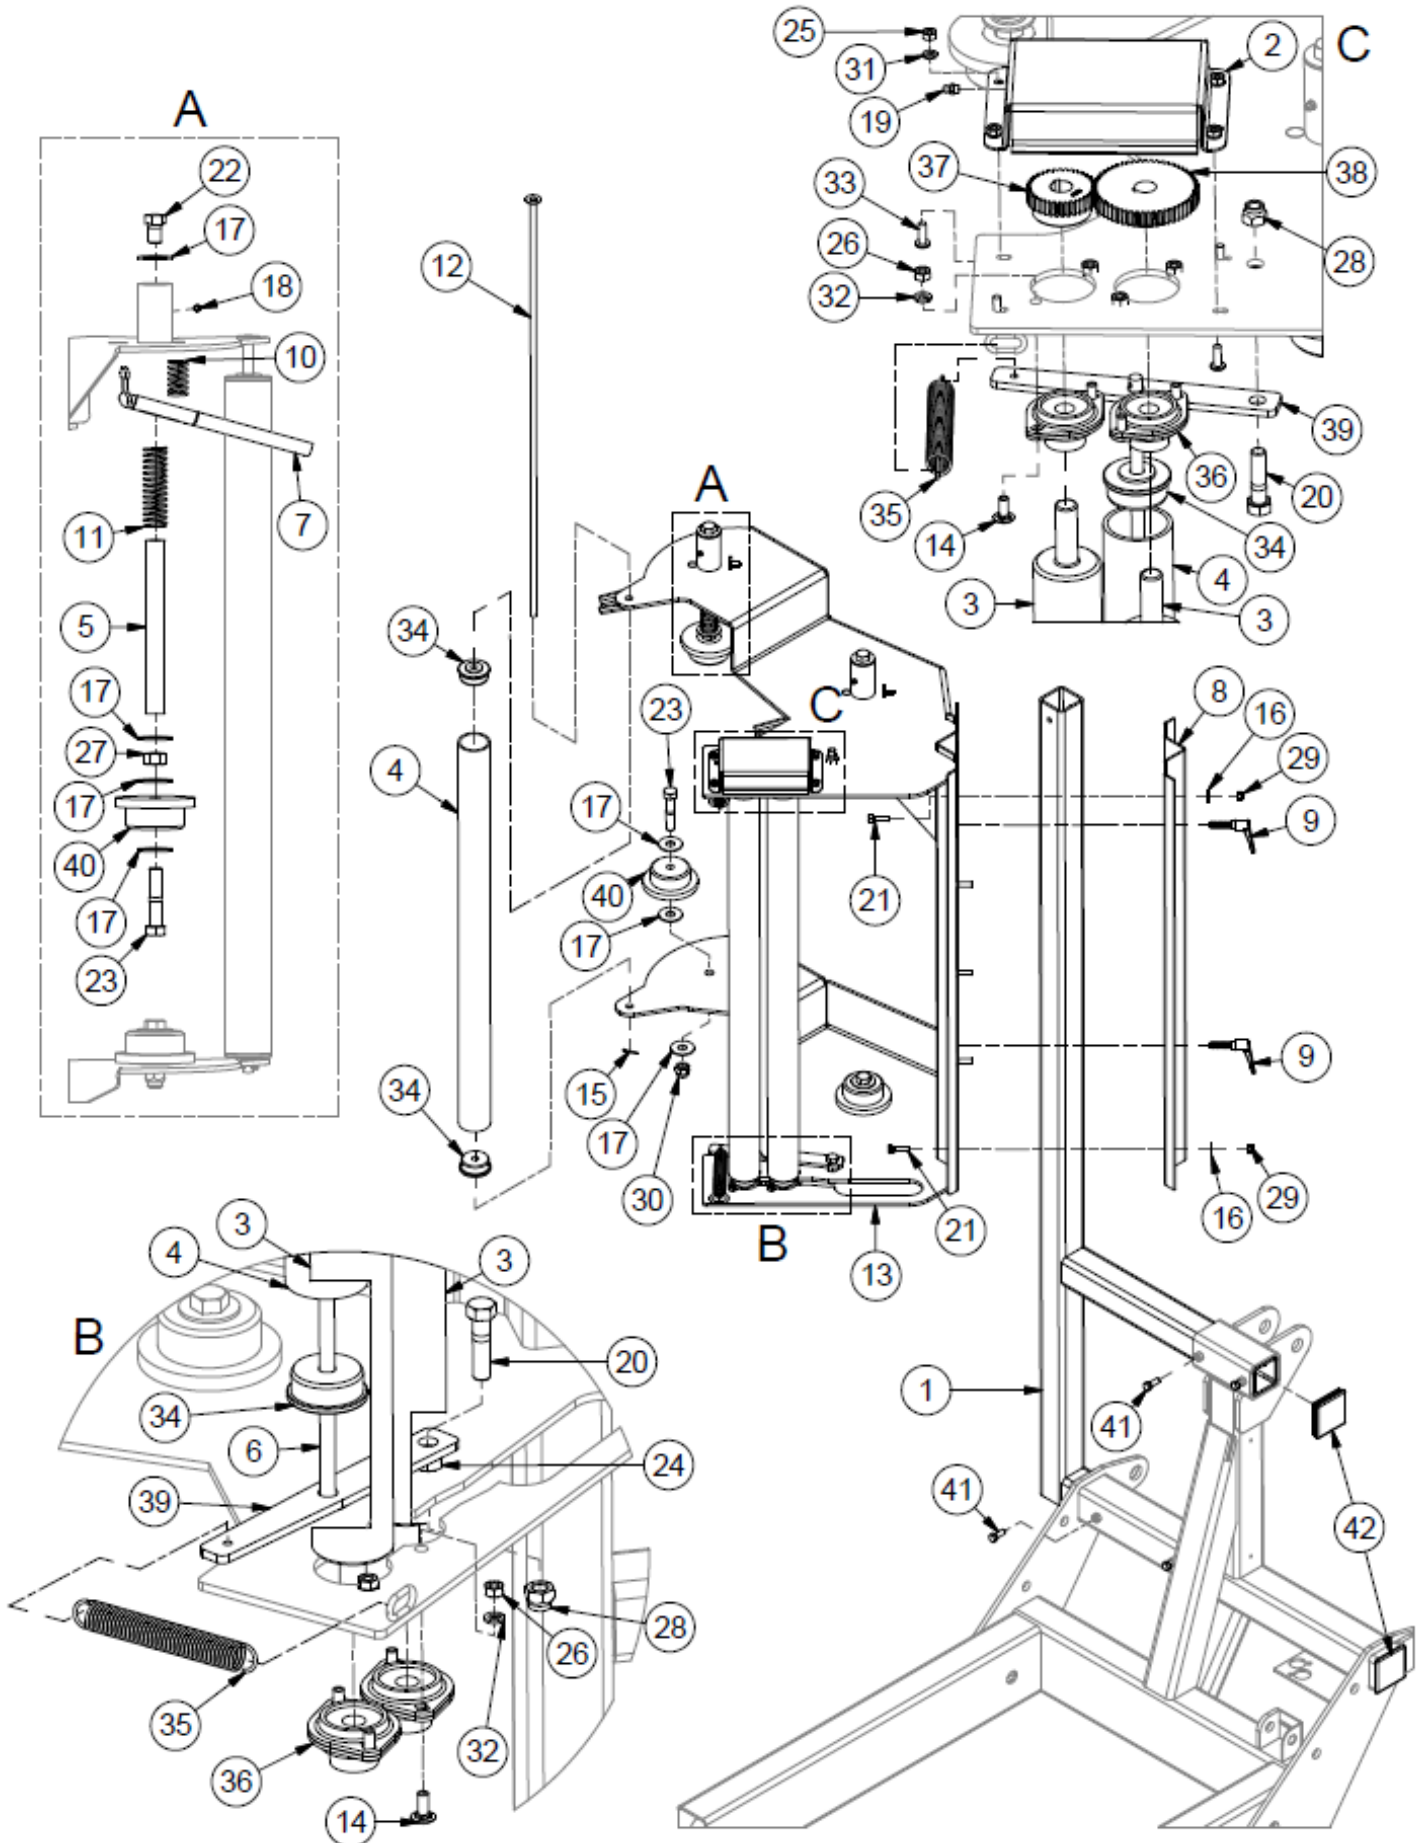


## Offset Film Tensioner

Serial no.1810001 to current, retrofittable.

Part no. 42443 - TL1000R DBL Tensioner Assembly includes Items 2 - 40.

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	35099	Tensioner Mounting Frame
2	1	36682	Grease Box
3	2	39916	Extended Tensioner Roller
4	2	39917	Extended Plastic Roller
5	2	41584	Top Wrap Holder Pin
6	1	41624	Plastic Roller Pin
7	2	41829	Rod Spool Clamp Holder
8	1	41843	Tensioner Back Plate
9	2	41844	Adjustable Handle
10	2	41882	Compression Spring .120" Wire X 1" OD X 1.75" Long
11	2	41883	Compression Spring .090" Wire X 1.22" OD X 7" Long
12	1	42020	Second Roller Pin
13	1	42436	Double Tensioner Frame
14	8	CB 5/16-18 X0.75 Z5	Carriage Bolt - 5/16-18 x 3/4" Grade 5 Zinc
15	1	CP 3/16 X 1.0	Pin, Cotter 3/16 x 1
16	12	FW 3/8	Flatwasher - 3/8" Zinc Plated USS
17	14	FW 5/8	Flatwasher - 5/8" Zinc Plated USS
18	2	GR 3/16D	3/16 Drive Straight Grease Fitting (King Fisher Brand)
19	1	GR 1/4 X 28	Grease Fitting 1/4-28 Strght-Standr Zerk
20	2	HB 1/2-13X2 Z5	Hex Bolt 1/2-13x2 Grade 5 Zinc Plated Hex Cap Screw
21	5	HB 3/8-16X1.25 Z5	Hex Bolt 3/8-16x1 1/4 Grade 5 Zinc Plated Hex Cap Screw
22	2	HB 5/8-11X1 Z5	Hex Bolt 5/8-11x1 Grade 5 Zinc Plated Hex Cap Screw
23	4	HB 5/8-11X3 Z5	Hex Bolt 5/8-11x3 Grade 5 Zinc Plated Hex Cap Screw
24	2	HN 1/2	Hex Nut 1/2"-13 Grade 5 Zinc Plated Finished
25	4	HN 1/4	Hex Nut 1/4"-20 Grade 5 Zinc Plated Finished
26	8	HN 5/16	Hex Nut 5/16"-18 Grade 5 Zinc Plated Finished
27	2	HN 5/8	Hex Nut 5/8"-11 Grade 5 Zinc Plated Finished
28	2	LN 1/2 N	LN 1/2-13 Zinc Plated Nylon Insert Lock Nut
29	5	LN 3/8 F	Center Locknuts (3/8-24) 2-Way Fine Thread
30	2	LN 5/8 N	LN 5/8-11 Zinc Plated Nylon Insert Lock Nut
31	4	LW 1/4	LW - 1/4" Zinc Plated Medium Split
32	8	LW 5/16	LW - 5/16" Zinc Plated Medium Split
33	4	MS 1/4X20X0.75	Machine Screw - (Inch)
34	4	TL500-100-021	Plastic Roller Cap
35	2	TL500-100-135	Spring - Tensioner
36	4	TL550-100-007	Rear Wheel 4"
37	1	TL550-100-008	Small Gear
38	1	TL550-100-009	Large Gear
39	2	TL550-100-016	Plastic Roller Mount
40	4	TL550-200-012	Plastic Wrap Spool
41	4	HB 3/8-16X1 Z5	Hex Bolt 3/8-16x1 Grade 5 Zinc Plated Hex Cap Screw
42	2	PEC2518S	3' Plastic End Cap


# Hydraulic Schematic

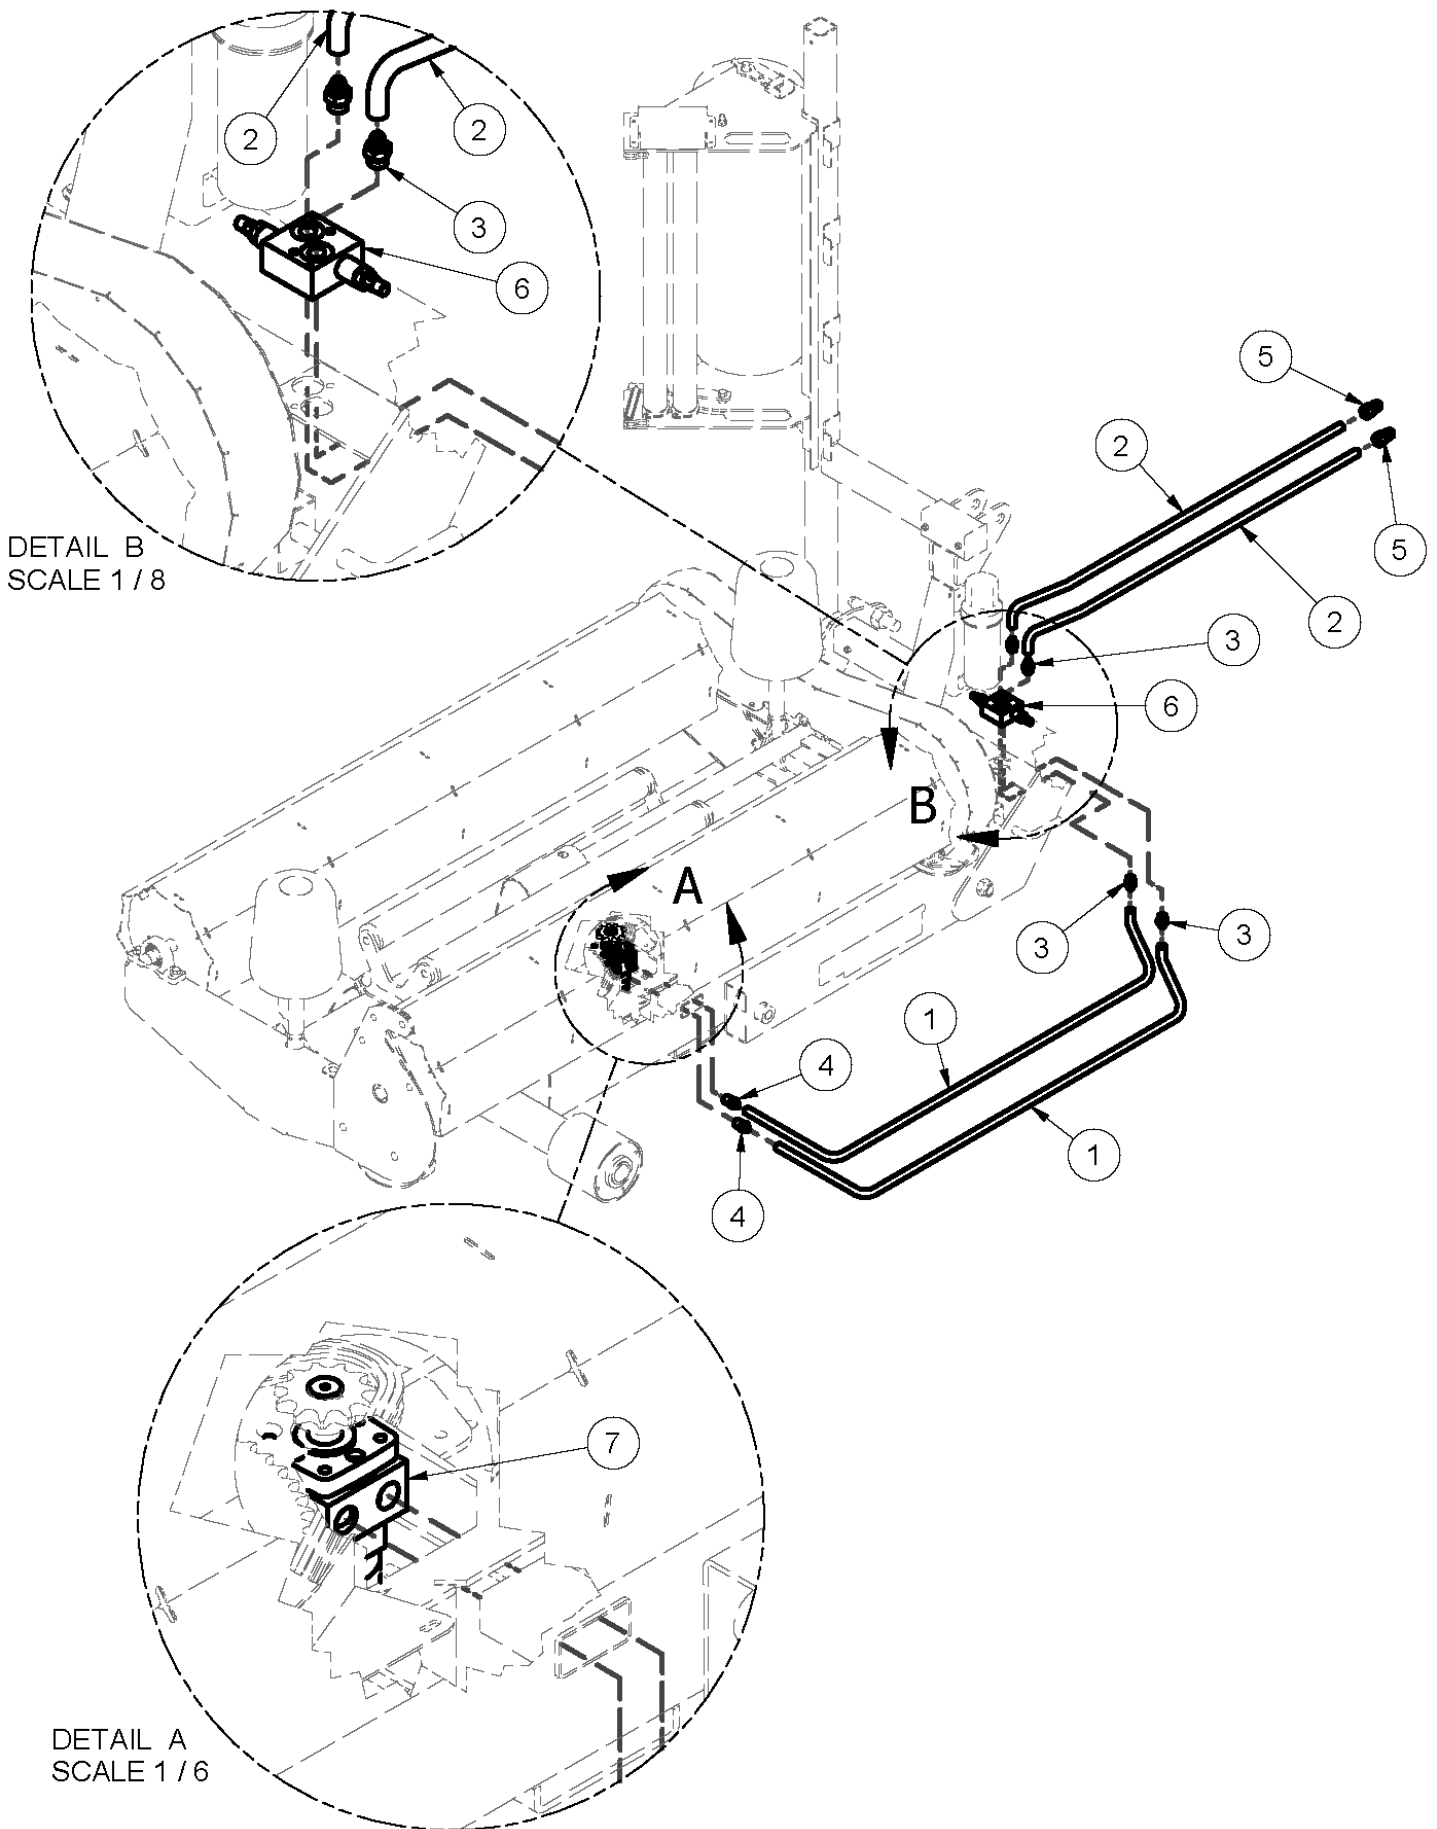

## Hydraulic Schematic

ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	35710	HH 3/4 Hydraulic Hose - 66" (6FJX-6FJX)
2	2	36423	HH 3/4 Hydraulic Hose - 66" (6FJX-8MP)
3	4	37629	Hydraulic Fitting
4	2	HF 2404-6-8	Hydraulic Fitting
5	2	HF 8010-4	Hydraulic Fitting
6	1	LA-SB2000RV	Crossover Relief Valve
7	1	TL5X2-200-050	Hydraulic Motor (M+S 2009 Models)

# Electrical Diagram

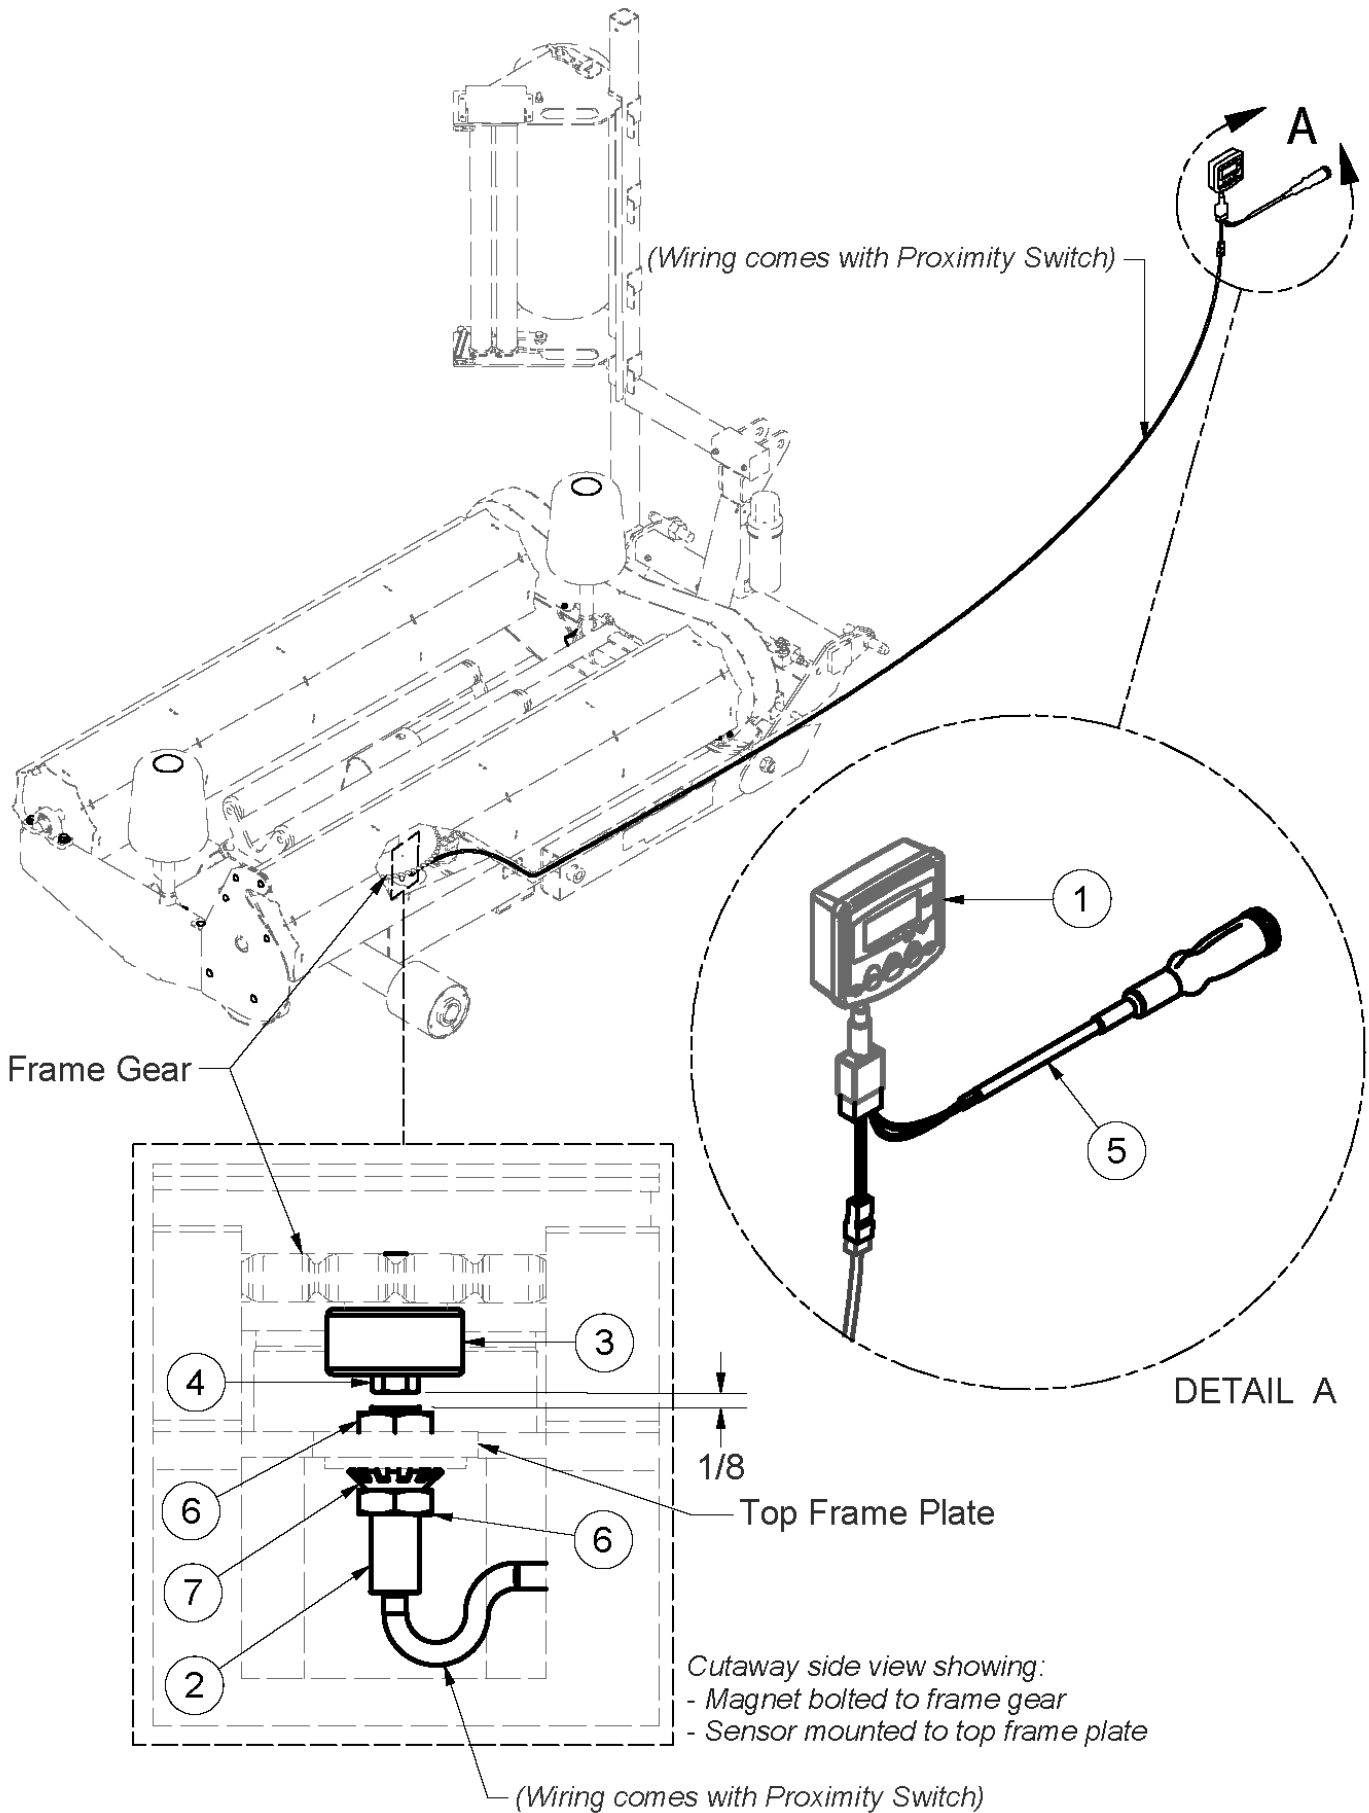












## Electrical Diagram

<b>ITEM</b>	<b>QTY</b>	<b>PART NUMBER</b>	<b>DESCRIPTION</b>
1	1	36252	Bale Wrap Computer
2	1	36253	Proximity Sensor
3	1	36254	Magnet
4	1	36255	M6 x 1 x 30 Metric Hex Bolt
5	1	36970	Power Supply Wiring Harness
6	2	Obtain Locally	HJN M12 x 1.75 Hex Jam Nut
7	1	Obtain Locally	M12 Toothed Lock Washer



# Torque Values - Imperial

## UNIFIED INCH BOLT AND CAP SCREW TORQUE VALUES

SAE Grade and Head Markings	1 or 2 <sup>b</sup>	5	5.1	5.2	8	8.2
	NO MARK 					
SAE Grade and Nut Markings	2	5		8		
	NO MARK 					

T81162 -19-04M41091

Size	Grade 1				Grade 2 <sup>b</sup>				Grade 5, 5.1, or 5.2				Grade 8 or 8.2			
	Lubricated <sup>a</sup>		Dry <sup>a</sup>		Lubricated <sup>a</sup>		Dry <sup>a</sup>		Lubricated <sup>a</sup>		Dry <sup>a</sup>		Lubricated <sup>a</sup>		Dry <sup>a</sup>	
	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft
1/4	3.7	2.8	4.7	3.5	6	4.5	7.5	5.5	9.5	7	12	9	13.5	10	17	12.5
5/16	7.7	5.5	10	7	12	9	15	11	20	15	25	18	28	21	35	26
3/8	14	10	17	13	22	16	27	20	35	26	44	33	50	36	63	46
7/16	22	16	28	20	35	26	44	32	55	41	70	52	80	58	100	75
1/2	33	25	42	31	53	39	67	50	85	63	110	80	120	90	150	115
9/16	48	36	60	45	75	56	95	70	125	90	155	115	175	130	225	160
5/8	67	50	85	62	105	78	135	100	170	125	215	160	240	175	300	225
3/4	120	87	150	110	190	140	240	175	300	225	375	280	425	310	550	400
7/8	190	140	240	175	190	140	240	175	490	360	625	450	700	500	875	650
1	290	210	360	270	290	210	360	270	725	540	925	675	1050	750	1300	975
1-1/8	400	300	510	375	400	300	510	375	900	675	1150	850	1450	1075	1850	1350
1-1/4	570	425	725	530	570	425	725	530	1300	950	1650	1200	2050	1500	2600	1950
1-3/8	750	550	950	700	750	550	950	700	1700	1250	2150	1550	2700	2000	3400	2550
1-1/2	1000	725	1250	925	990	725	1250	930	2250	1650	2850	2100	3600	2650	4550	3350

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical grade.

<sup>a</sup> "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without any lubrication.

<sup>b</sup> Grade 2 applies for hex cap screws (not hex bolts) up to 152 mm (6-in.) long. Grade 1 applies for hex cap screws over 152 mm (6-in.) long, and for all other types of bolts and screws of any length.


Fasteners should be replaced with the same or higher grade. If higher grade fasteners are used, these should only be tightened to the strength of the original.

Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value.

# Torque Values - Metric

## METRIC BOLT AND CAP SCREW TORQUE VALUES

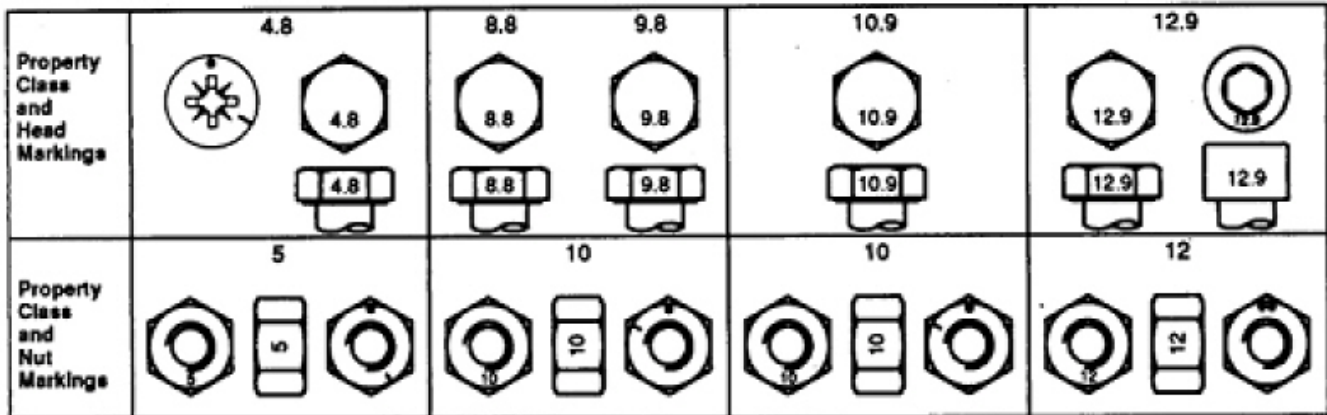

Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Lubricated <sup>a</sup>		Dry <sup>a</sup>		Lubricated <sup>a</sup>		Dry <sup>a</sup>		Lubricated <sup>a</sup>		Dry <sup>a</sup>		Lubricated <sup>a</sup>		Dry <sup>a</sup>	
	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft	N-m	lb-ft
M6	4.8	3.5	6	4.5	9	6.5	11	8.5	13	9.5	17	12	15	11.5	19	14.5
M8	12	8.5	15	11	22	16	28	20	32	24	40	30	37	28	47	35
M10	23	17	29	21	43	32	55	40	63	47	80	60	75	55	95	70
M12	40	29	50	37	75	55	95	70	110	80	140	105	130	95	165	120
M14	63	47	80	60	120	88	150	110	175	130	225	165	205	150	260	190
M16	100	73	125	92	190	140	240	175	275	200	350	255	320	240	400	300
M18	135	100	175	125	260	195	330	250	375	275	475	350	440	325	560	410
M20	190	140	240	180	375	275	475	350	530	400	675	500	625	460	800	580
M22	260	190	330	250	510	375	650	475	725	540	925	675	850	625	1075	800
M24	330	250	425	310	650	475	825	600	925	675	1150	850	1075	800	1350	1000
M27	490	360	625	450	950	700	1200	875	1350	1000	1700	1250	1600	1150	2000	1500
M30	675	490	850	625	1300	950	1650	1200	1850	1350	2300	1700	2150	1600	2700	2000
M33	900	675	1150	850	1750	1300	2200	1650	2500	1850	3150	2350	2900	2150	3700	2750
M36	1150	850	1450	1075	2250	1650	2850	2100	3200	2350	4050	3000	3750	2750	4750	3500

DO NOT use these values if a different torque value or tightening procedure is given for a specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical property class.

Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to the strength of the original.

<sup>a</sup> "Lubricated" means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings. "Dry" means plain or zinc plated without any lubrication.

Make sure fasteners threads are clean and that you properly start thread engagement. This will prevent them from failing when tightening.

Tighten plastic insert or crimped steel-type lock nuts to approximately 50 percent of the dry torque shown in the chart, applied to the nut, not to the bolt head. Tighten toothed or serrated-type lock nuts to the full torque value.

# Index

Bale Size . . . . .	.1-8
Before Operation . . . . .	.1-8
Continuous Wrapping & Unloading . . . . .	.3-2
Electrical Connection . . . . .	.2-3
Electrical Diagram . . . . .	5-18
Film Tensioner. . . . .	5-12
First Bale . . . . .	.3-2
Frame . . . . .	.5-8
Frame (Current) . . . . .	5-10
Hydraulic Schematic . . . . .	5-16
Middle Rollers . . . . .	.5-6
Offset Film Tensioner . . . . .	5-14
Operator's Manual . . . . .	. II
Rollers . . . . .	.5-4
Round Bales . . . . .	.1-8
Safety Decal Location . . . . .	.1-3
Safety Decals . . . . .	.1-5
Safety Guidelines. . . . .	.1-2
Section 1: Safety . . . . .	.1-1
Section 2: Initial Setup . . . . .	.2-1
Section 3: Operating Procedure . . . . .	.3-1
Section 4: Bale Wrap Computer Operation . . . . .	.4-1
Section 5: Parts Lists & Breakdowns. . . . .	.5-1
Serial # Decal . . . . .	. II
Square Bales . . . . .	.1-8
Storage & Maintenance . . . . .	.1-2
To Install Plastic Wrap Film. . . . .	.3-1
Torque Values - Imperial . . . . .	. V
Torque Values - Metric . . . . .	. VI
To Wrap Bales. . . . .	.3-2
Trouble Shooting Plastic Installation . . . . .	.3-1
Turntable . . . . .	.5-2
Warranty and Limitation of Liability . . . . .	. II



**TUBE•LINE™**  
**MANUFACTURING LTD**